

# Vacuum Ejector

## Series ZM



### All in One!

- Built-in suction filter and silencer
- Air supply valve for generating a vacuum
- Vacuum release valve (equipped with a flow volume adjustment valve)
- Vacuum pressure switch (solid state, diaphragm)

### Adaptable for a manifold application

All tubing, wiring, indicators, and adjustment functions have been eliminated from the side surfaces, thus enabling assembly and maintenance while linked to a manifold.

- EXH system — Common
- SUP system — Common, Individual


### Maximum air suction volume increased by 40% Maximum vacuum pressure -84 kPa

The suction volume has been increased by 40% through the adoption of a two-stage nozzle construction.


### Compact and lightweight

15.5 mm width, 400 g (full system)

### Air operated type

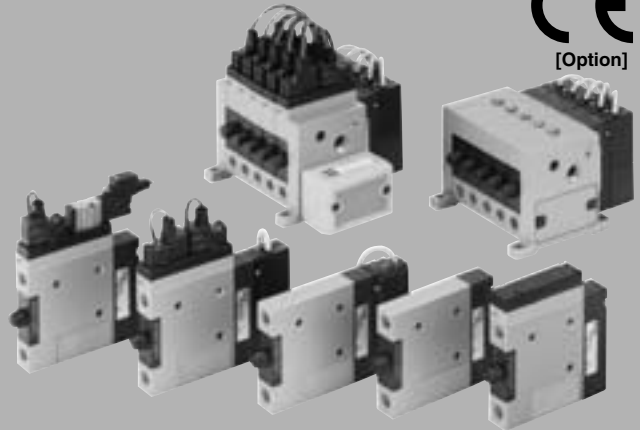

### Two-stage nozzle construction

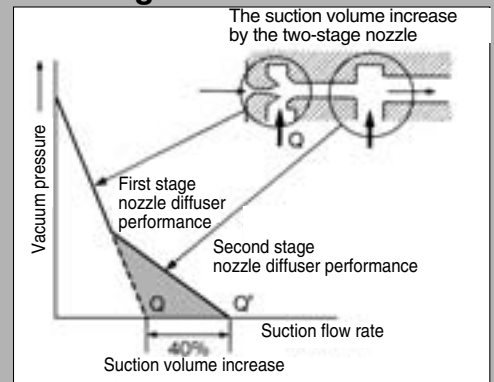


### Series ZM Applications

Fields: Semiconductor and electrical, automobile assembly, food and medical equipment, and various types of manufacturing and assembly equipment

Machines: Robotic hand/material handling, automotive assembling machines, automatic transfer equipment, pick and place, printing machinery

Functions: Vacuum adsorption transfer, vacuum adsorption retention, vacuum generated air flow

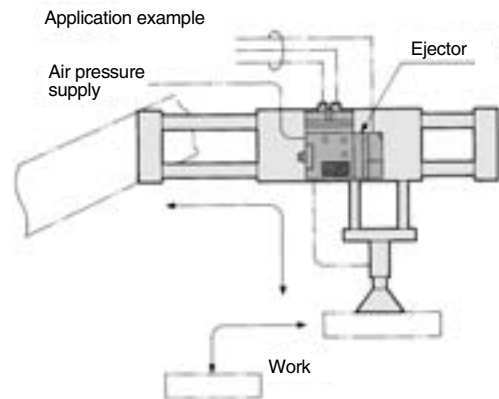

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP


HEP


Related Equipment



ZA  
ZX  
ZR  
ZM  
ZMA  
ZQ  
ZH  
ZU  
ZL  
ZY□  
ZF□  
ZP□  
SP  
ZCUK  
AMJ  
AMV  
AEP  
HEP  
Related Equipment

**Table (1) How to Order Connector for Solid State Switch**




- Without lead wire (A connector and 4 sockets) ..... **ZS-20-A**
- With lead wire ..... **ZS-20-5A-** 

Note) If ordering switch with 5 m lead wire, specify both switch and lead wire with connector part numbers.  
Ex.) ZM -E15CN ..... 1 pc.  
\* ZS-20-5A-50 ..... 1 pc.

**Lead wire length**

Nil	0.6 m
30	3 m
50	5 m


**Table (2) How to Order Connector for Supply Valve and Vacuum Release Valve**

- VJ10-36-1A-**  (Applicable to 100 VAC only)
- VJ10-36-3A-**  (Applicable to 110 VAC only)
- VJ10-20-4A-**  (Applicable to DC only)

**Caution**  
When using AC, the DC solenoids are operated via a rectifier. Therefore, when using this type, make sure to combine the connector assembly equipped with a rectifier with the exclusive solenoids. Using other combinations could lead to burned coils or other types of malfunctions.

**Lead wire length**

Nil	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm

Note) If ordering a valve with 600 mm or longer lead wire, indicate the valve without connector and connector assembly.  
Ex.) Lead wire length: 1000 mm  
ZM -K1LO (-Q) ..... 1 pc.  
\* VJ10-36-1A-10 ..... 2 pcs.

**How to Order**

**ZM -** **Nozzle diameter** - **Body style** - **Standard supply pressure**

05	0.5 mm
07	0.7 mm
10	1.0 mm
13	1.3 mm
15	1.5 mm

<Without valve>	
2	For single unit
4	For manifold, common SUP
6	For Manifold, individual SUP


<With valve>	
1	For single unit
3	For manifold, common SUP
5	For manifold, individual SUP

M	0.35 MPa (Double diffuser) (Except nozzles diameter "05" and "15" type)
S	0.45 MPa (Single diffuser) (Nozzle diameter "13" and "15" only)
H	0.5 MPa (Double diffuser) (Except nozzles diameter "15" type)


**Quick Delivery/Model**

<Without valve/Single unit>	<With valve/Single unit>	
• ZM052H	• ZM051H-K5LZ (-Q)	• ZM131H-K5LZ (-Q)
• ZM072H	• ZM051H-K5LZ-E15 (-Q)	• ZM131H-K5LZ-E15 (-Q)
• ZM102H	• ZM071H-K5LZ (-Q)	• ZM131M-K5LZ (-Q)
• ZM132H	• ZM071H-K5LZ-E15 (-Q)	• ZM131M-K5LZ-E15 (-Q)
	• ZM101H-K5LZ (-Q)	
	• ZM101H-K5LZ-E15 (-Q)	


# Series ZM

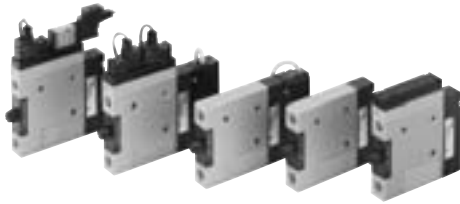

JIS Symbol



## Ejector System Circuit

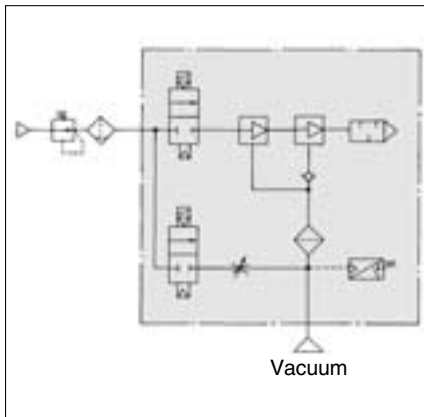

## Model

Nozzle dia. ø (mm)	Model	Standard supply pressure			Maximum suction flow rate (ℓ/min (ANR))	Air consumption (ℓ/min (ANR))	Diffuser construction
		H	M	S			
0.5	ZM05□H	0.5 MPa	—	—	15	17	Double diffuser
0.7	ZM07□H				30	30	
1.0	ZM10□H				50	60	
1.3	ZM13□H	0.35 MPa	—	—	66	90	
0.7	ZM07□M				23	33	
1.0	ZM10□M				38	60	
1.3	ZM13□M	—	—	0.45 MPa	44	85	Single diffuser
1.3	ZM13□S				37	88	
1.5	ZM15□S				45	110	

## Vacuum Ejector Specifications

Fluid	Air	
Maximum operating pressure	0.7 MPa	
Maximum vacuum pressure	- 84 kPa	
Supply pressure range	Without valve	0.2 to 0.55 MPa
	With valve	0.25 to 0.55 MPa
Operating temperature range	Without valve	5 to 60 °C
	With valve	5 to 50 °C
Air supply valve	Main valve — Poppet	
Vacuum release valve	Pilot valve — VJ114, VJ324M	
Vacuum pressure switch	Electronic	ZSE1-00-□□
	Diaphragm	ZSM1-0□□
Suction filter	Filtration degree: 30 μm, Material: PE (Polyethylene)	

## Valve Specifications

How to operate	Pilot type
Main valve	NBR poppet
Effective area	3 mm <sup>2</sup>
Cv factor	0.17
Operating pressure range	0.25 to 0.7 MPa
Electrical entry	Plug connector, Grommet (available on DC)
Max. operating frequency	5 Hz
Voltage	24/12/6/5/3 VDC, 100/110 VAC (50/60 Hz)
Power consumption	DC: 1 W (With light: 1.05 W), 100 VAC: 1.4 W (1.45 W), 110 VAC: 1.45 W (1.5 W)



Made to Order


(Refer to pages 1004 to 1006 for details.)

## Mass

Model	Without switch	-E□□	-E□□L	-M□□	-M□□L	(kg)
ZM□□2□	0.17	0.21	0.26	0.27	0.32	
ZM□□4□	0.17	0.21	0.26	0.27	0.32	
ZM□□6□	0.17	0.21	0.26	0.27	0.32	
ZM□□1□-J□□	0.24	0.28	0.33	0.34	0.39	
ZM□□3□-J□□						
ZM□□5□-J□□						
ZM□□1□-K□□	0.25	0.29	0.34	0.35	0.4	
ZM□□3□-K□□						
ZM□□5□-K□□						
ZM□□1□-A□□	0.25	0.29	0.34	0.35	0.4	
ZM□□3□-A□□						
ZM□□5□-A□□						
ZM□□1□-B□□	0.26	0.3	0.35	0.36	0.41	
ZM□□3□-B□□						
ZM□□5□-B□□						
ZM□□□□-P□□	0.24	0.28	0.33	0.34	0.39	

Stations	-04R/L	-04B	-06R/L	-06B	-SR/L	-SB
1	0.209	0.219	0.219	0.229	0.239	0.269
2	0.214	0.224	0.224	0.234	0.244	0.274
3	0.219	0.229	0.229	0.239	0.249	0.279
4	0.224	0.234	0.234	0.244	0.254	0.284
5	0.229	0.239	0.239	0.249	0.259	0.289
6	0.234	0.244	0.244	0.254	0.264	0.294
7	0.239	0.249	0.249	0.259	0.269	0.299
8	0.244	0.254	0.254	0.264	0.274	0.304
9	0.249	0.259	0.259	0.269	0.279	0.309
10	0.254	0.264	0.264	0.274	0.284	0.314

Construction: ZM□1□-K□L-E□

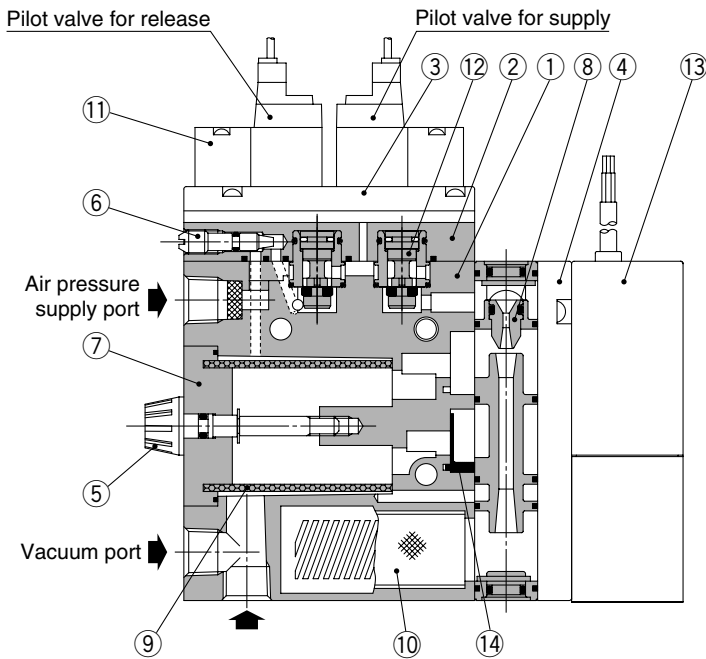

**Component Parts**

No.	Description	Material	Note
1	Body	Aluminum die-casted	
2	Valve cover	Zinc die-casted or resin	
3	Adapter plate	Zinc die-casted	
4	Cover	Zinc die-casted	Without switch: ZM-HCA, With switch: ZM-HCB
5	Tension bolt	Stainless steel/Polyacetal	

**Replacement Parts**

No.	Description	Material	Part no.
6	Release flow rate adjusting needle	Brass/Electroless nickel plated	ZM-NA (With lock nut: ZM-ND-L)
7	Filter cover assembly	—	ZM-FCB-0
8	Diffuser assembly	—	ZM□□0□-0
9	Suction filter	Polyethylene	ZM-SF
10	Silencer assembly	—	ZM-SA (High noise reduction: ZM-SA-D)
11	Pilot valve	—	VJ114-□□□□
12	Poppet valve assembly	—	ZMA-PV2-0
13	Vacuum pressure switch	—	ZSE1-00-□□ ZSM1-015 ZSM1-021
14	Check valve	NBR	ZM-CV

**⚠ Precautions**

Be sure to read before handling. Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.

**⚠ Caution**

**Selection and sizing of Series ZM**  
Refer to the Vacuum Equipment Model Selection on pages 825 to 843.

**Operation of an ejector equipped with a valve**

When the air supply pilot valve is turned ON, air flows to the diffuser assembly, and a vacuum is created.

When the pilot valve for releasing the vacuum is turned ON, air flows to the vacuum port side, immediately causing a release in the vacuum. The release speed can be adjusted by regulating the flow volume adjustment screw.

When the supply valve is turned OFF, the atmospheric pressure causes the air to flow back from the silencer, thus releasing the vacuum. However, in order to properly release a vacuum, a vacuum release valve must be used.

**Operating environment**

Because the filter cover is made of polycarbonate, do not use it with or expose it to following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkalinic), etc. Also, do not expose it to direct sunlight. Furthermore, avoid use in direct sunlight.

**Release flow rate adjusting screw**

Turning the vacuum release flow rate adjusting screw 4 full turns from the fully closed position renders the valve fully open. Do not turn more than four times since turning excessively may cause the screw fall off.

In order to prevent the screw from loosening and falling out, the release flow rate adjusting needle with lock nut is also available.

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP


Related Equipment

# Series ZM


## Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: H ... 0.5 MPa

### ZM05□H

#### Exhaust Characteristics

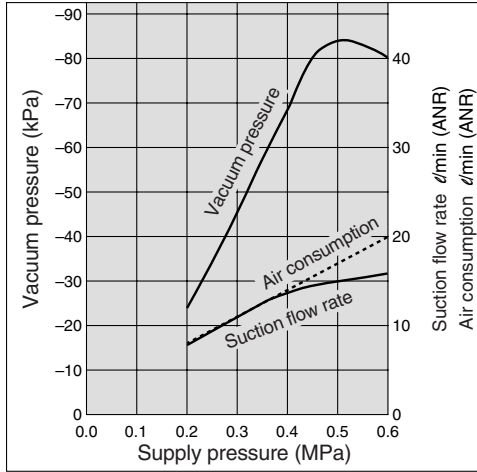


#### Flow Characteristics

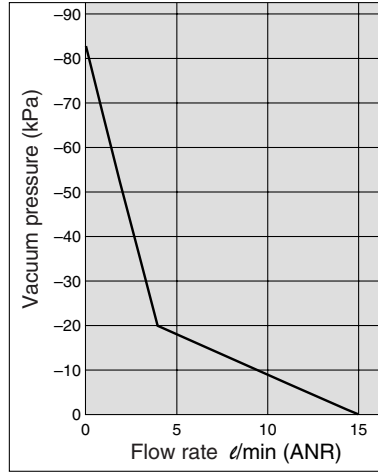


### ZM07□H

#### Exhaust Characteristics

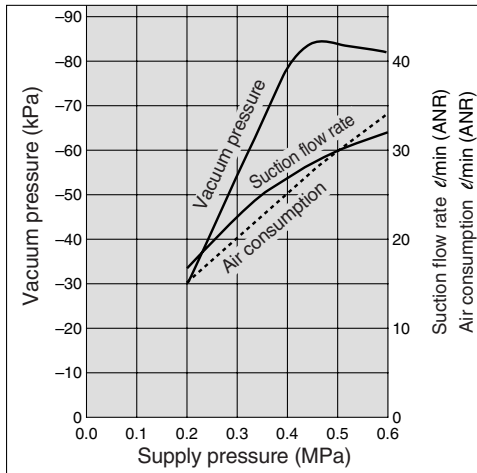


#### Flow Characteristics

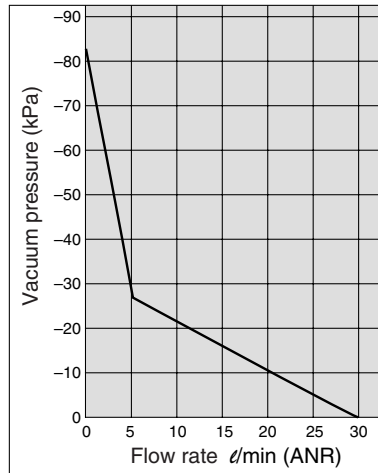


### ZM10□H

#### Exhaust Characteristics

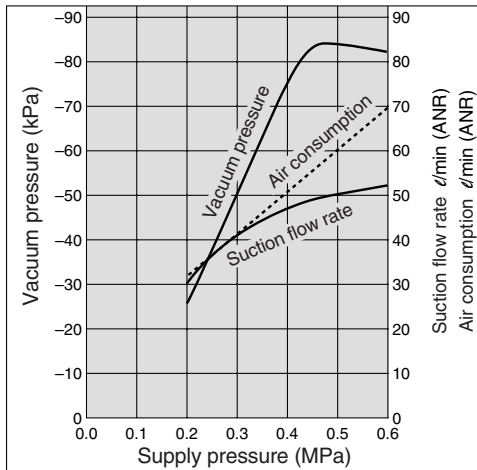


#### Flow Characteristics

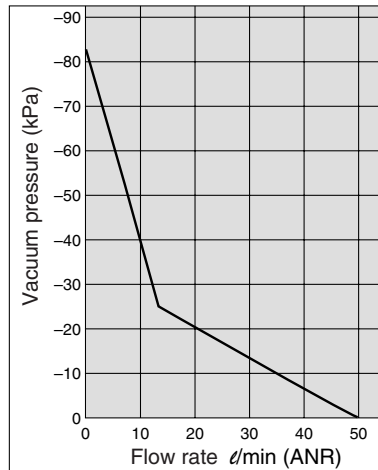


**Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: H ... 0.5 MPa**

**ZM13□H**

**Exhaust Characteristics**

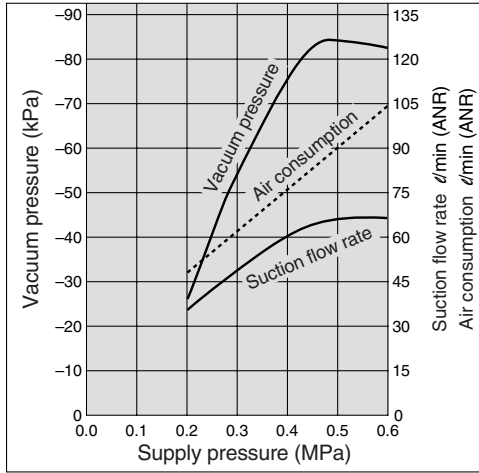


**Flow Characteristics**

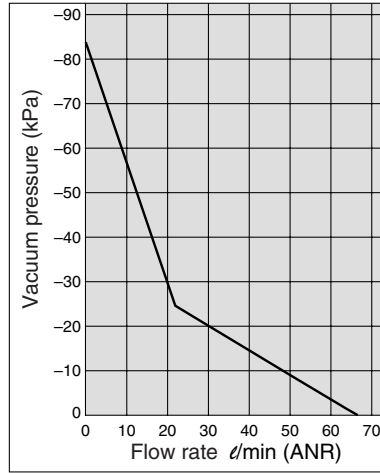


**Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: S ... 0.45 MPa**

**ZM13□S**

**Exhaust Characteristics**

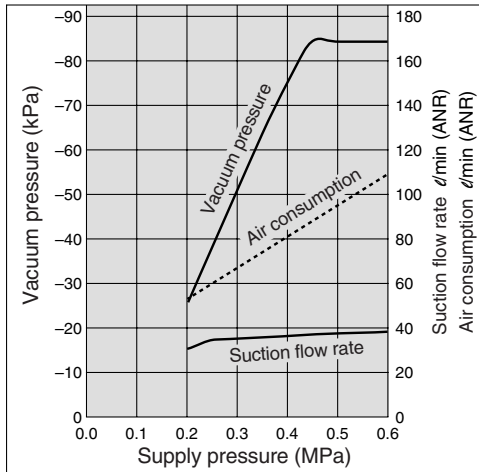


**Flow Characteristics**

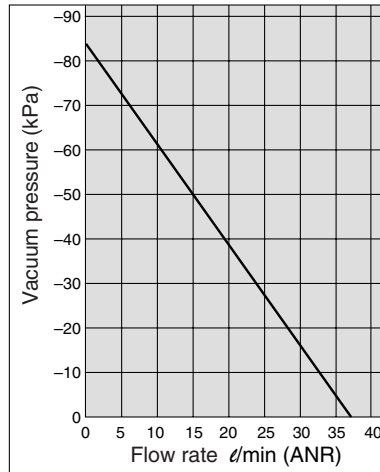


**ZM15□S**

**Exhaust Characteristics**

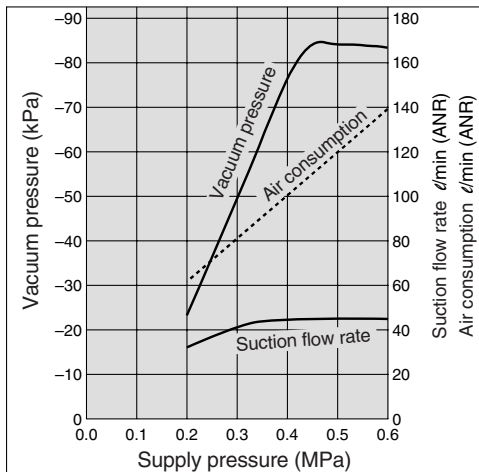

**Flow Characteristics**

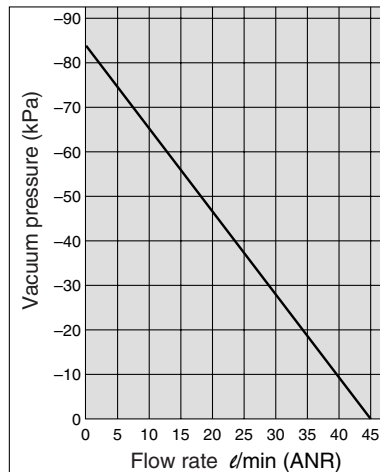


- ZA
- ZX
- ZR
- ZM**
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP

Related  
Equipment


## Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: M ... 0.35 MPa

### ZM07 □ M


#### Exhaust Characteristics

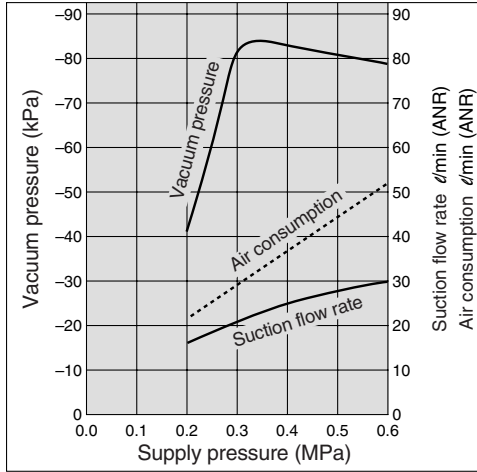

#### Flow Characteristics

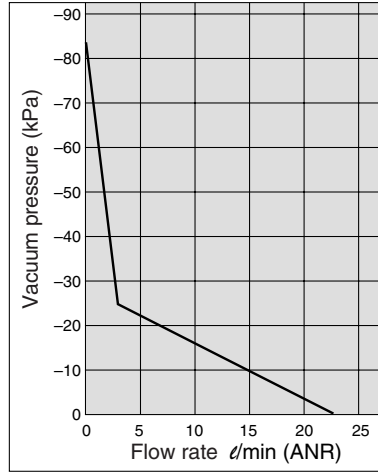

### How to Read Flow Characteristics Graph

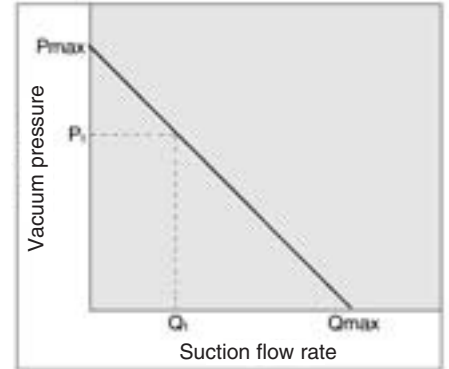


Flow characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, a change in vacuum pressure will also be expressed. Normally this relationship is expressed in ejector standard supply pressure. In graph, Pmax is max. vacuum pressure and Qmax is max. suction flow. The values are specified according to catalog use.

Changes in vacuum pressure are expressed in the order below.


1. When ejector suction port is covered and made airtight, suction flow is 0 and vacuum pressure is at maximum value (Pmax).
2. When suction port is opened gradually, air can flow through (air leakage), suction flow increases, but vacuum pressure decreases (condition P<sub>1</sub> and Q<sub>1</sub>).
3. When suction port is opened further, suction flow moves to maximum value (Qmax), but vacuum pressure is near 0 (atmospheric pressure).  
When vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure decreases as leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0.  
When ventilative or leaky work must be adsorbed, please note that vacuum pressure will not be high.

### ZM10 □ M

#### Exhaust Characteristics

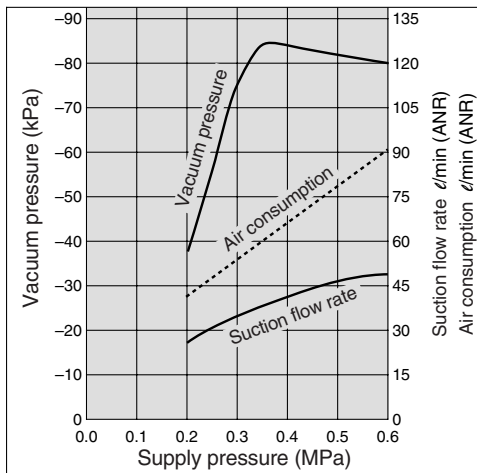


#### Flow Characteristics

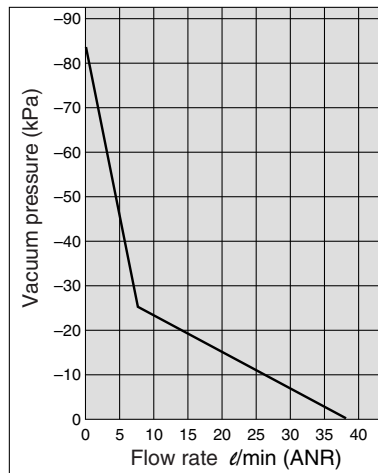


### ZM13 □ M

#### Exhaust Characteristics

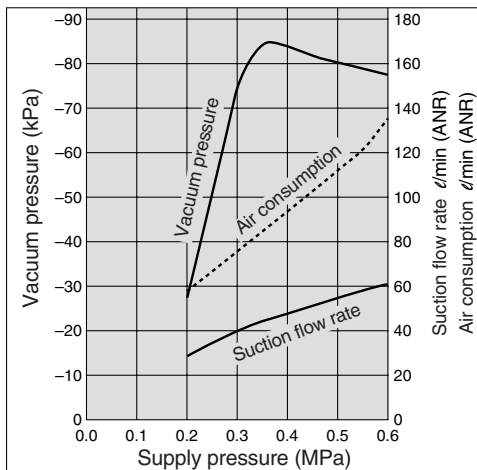

#### Flow Characteristics

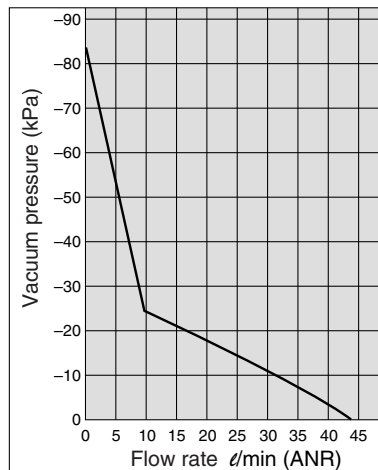



## Vacuum Pressure Switch/Solid State Switch (ZSE), Diaphragm Switch (ZSM)

### Vacuum Switch


Model	ZSE1-00-14	ZSE1-00-15	ZSE1-00-16	ZSE1-00-17	ZSE1-00-18	ZSE1-00-19	ZSE1-00-55	ZSM1-015	ZSM1-021
Sensor type	Solid state							Diaphragm	
Switch	Electronic circuit							Solid state	Reed
Set pressure range	0 to -101 kPa								
Hysteresis	1 to 10% of the set pressure (Changeable)		3% full span or less (Fixed)		1 to 10% of the set pressure (Changeable)			Max. 15 kPa	Max. 20 kPa
Repeatability	±1% full span or less								
Temperature characteristics	±3% full span or less								
Operating voltage	12 to 24 VDC (Ripple ±10% or less)							4.5 to 28 VDC	100 VAC/VDC
ON-OFF output	NPN open collector 30 V, Max. 80 mA						PNP open collector 80 mA	Open collector 28 V, Max. 40 mA	—
Setting points	1 point		2 points			1 point		1 point	
Operation indicator light	Lights up when ON		Lights ON (Output 1: Red, Output 2: Green)			Lights up when ON	Lights up when ON (Red)	Lights up when ON	
Setting trimmer	3 rotations	200 degrees	3 rotations	200 degrees	3 rotations	200 degrees	18 rotations		
Current consumption	17 mA or less (When 24 VDC is ON)		25 mA or less (When 24 VDC is ON)		17 mA or less (When 24 VDC is ON)			10 mA or less(24 VDC)	—
Max. current	—								
Max. operating pressure	0.2 MPa							0.5 MPa	

\* When using ejector system, instantaneous pressure up to 0.5 MPa will not damage the switch.


### Solid State Switch (ZSE)

#### Circuit/Connection


##### ZSE1-00-14, -15

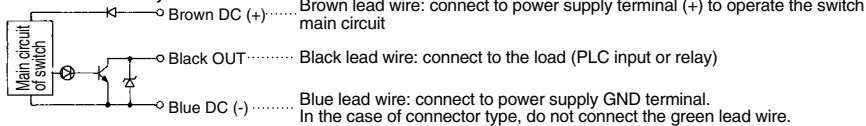


##### ZSE1-00-16, -17

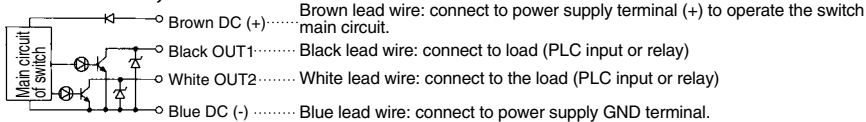

##### ZSE1-00-18, -19

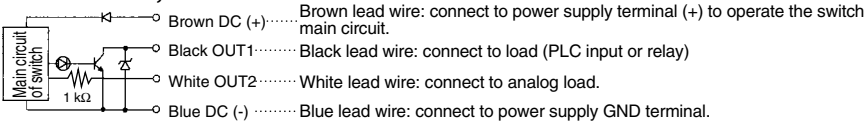


##### ZSE1-00-55

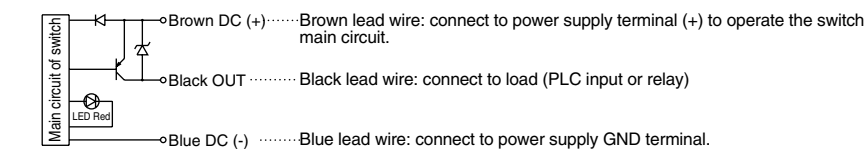

### Diaphragm Switch (ZSM)

#### Solid State Switch: ZSM1-015

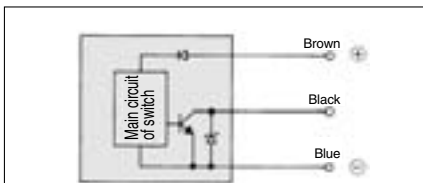


Brown lead wire: Connect the ⊕ power supply to operate the main switch circuit (to the ⊕ terminal of the power source).

Black lead wire: Connect the load (to the input or output relay of the PLC).

Blue lead wire: Connect the ⊖ power supply (to the GND terminal of the power supply).

#### Reed Switch: ZSM1-021

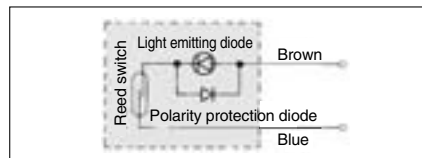


#### Contact protection box

The switch does not have a built-in contact protection circuit. Use this box if an induction load is applied or if the lead wire is longer than 5 meters.



#### Internal Circuit of Contact Protection Box

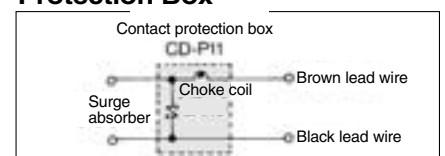


## How to Set the Pressure

- The ON pressure is set with the pressure setting trimmer. The high pressure/high vacuum pressure can be set turning it clockwise.
- When setting, use a flat head screw driver which fits the groove in the trimmer, and turn it gently with your fingertips.


### ZSE1(L)-□□-14-15-18-19

- Hysteresis can be set using the hysteresis setting trimmer. The setting is increased by turning it clockwise, and the range is 1 to 10% of the set pressure range.
- When the hysteresis setting trimmer is moved after setting the ON pressure, it must be set again.

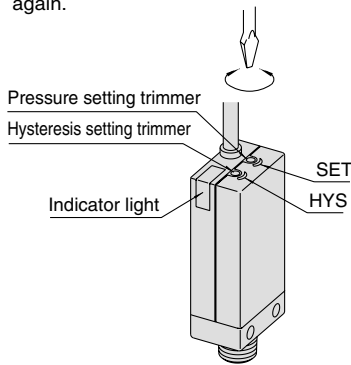


### ZSE1(L)-□□-16-17

- OUT1 (black lead wire, red LED) can be set with the pressure setting trimmer 1 (SET1).
- OUT2 (white lead wire, green LED) can be set with the pressure setting trimmer 2 (SET2).

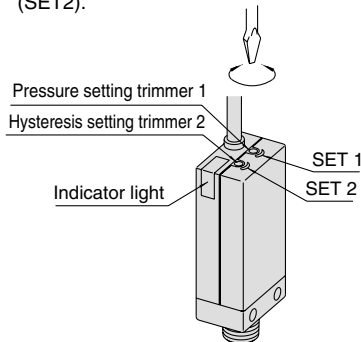

- When using the switch to confirm correct adsorption, the vacuum pressure is set to the minimum value to reliably adsorb. If the value is set below the minimum, the switch will be turned ON even when adsorption has failed or is insufficient. If the pressure is set too high, the switch may not turn ON even though it may adsorb correctly.

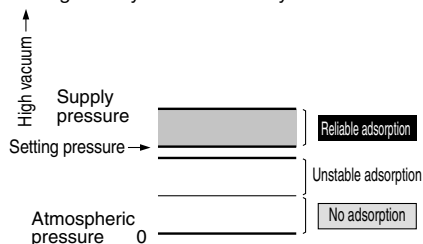


## ⚠ Caution

Observe the following precautions for setting the vacuum pressure: Use your fingertips to gently turn the screwdriver. Do not use a screwdriver with a large grip or with a tip that does not fit into the trimmer groove because this could damage the groove.

## Hysteresis


Hysteresis is the difference in pressure when the output signal is ON and OFF. The pressure to be set is the ON pressure. It turns ON at the set pressure.

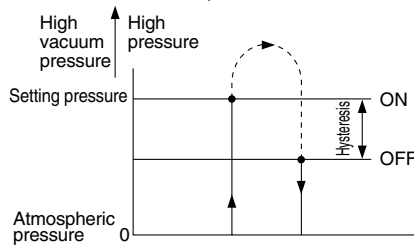

## How to Use Connector

### 1. Attaching and detaching connectors


- When assembling the connector to the switch housing, push the connector straight onto the pins until the level locks into the housing slot.
- When removing the connector from the switch housing, push the lever down to unlock it from the slot and then withdraw the connector straight off of the pins.

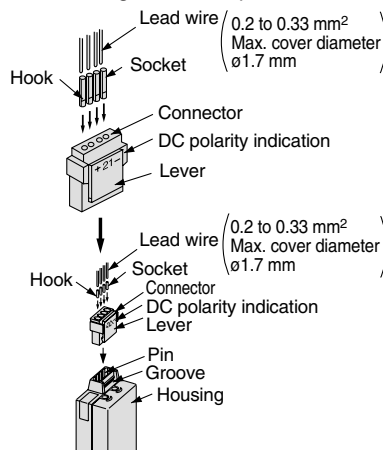

### 2. Crimping of lead wires and sockets

Strip 3.2 to 3.7 mm of the lead wire ends, insert each stripped wire into a socket and crimp contact it using special crimping tool. Be careful that the outer insulation of the lead wires does not interfere with the socket contact part.

(Crimping tool: DXT170-75-1)

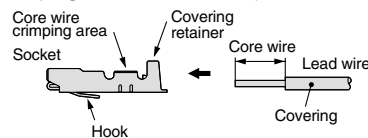


### 3. Attaching and detaching of socket to connector with lead wire

#### • Attaching

Insert the sockets into the square holes of the connector (with +, 1, 2, - indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.


#### • Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (about 1 mm). If the socket will be used again, first spread the hook outward.





ZA
ZX
ZR
ZM
ZMA
ZQ
ZH
ZU
ZL
ZY□
ZF□
ZP□
SP
ZCUK
AMJ
AMV
AEP
HEP
Related Equipment

# Series ZM

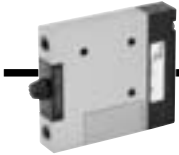

## For Single Unit/Without Valve Basic Type


ZM□2□□<sup>H</sup>□<sub>S</sub>□

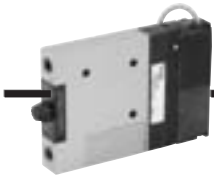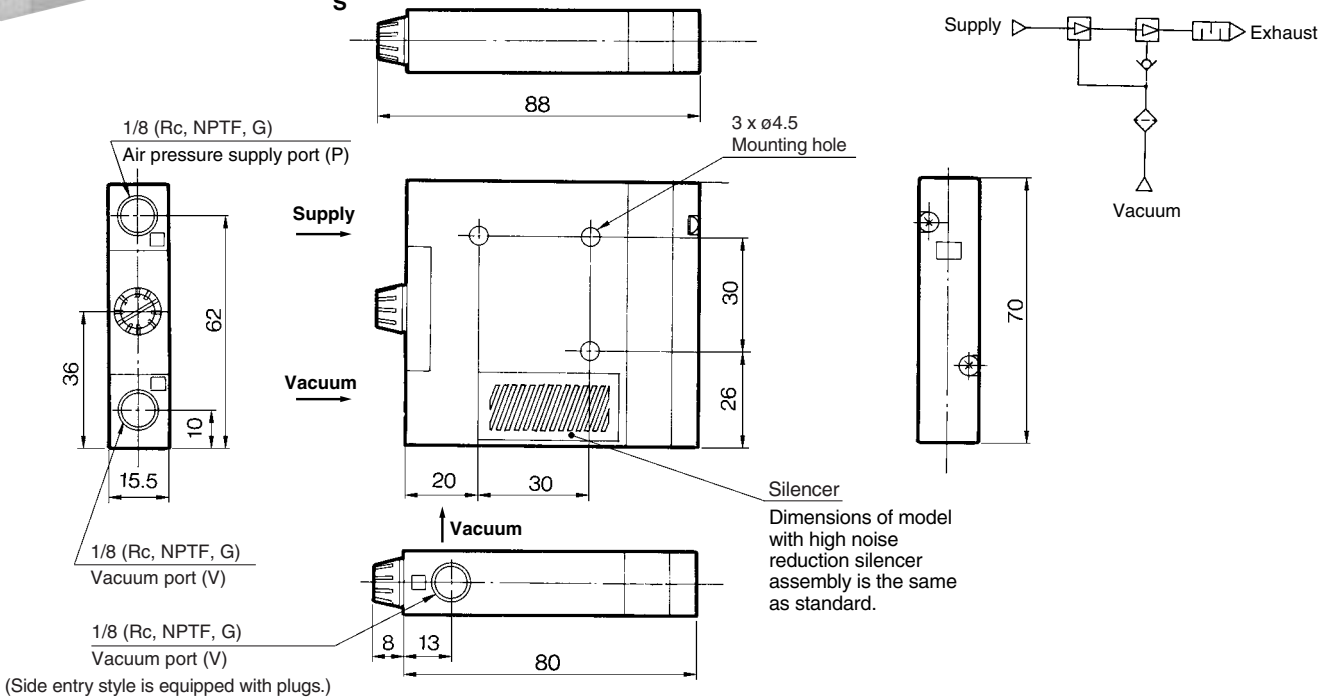


### <Components>

## For Single Unit/Without Valve Basic Type with Switch

ZM□2□□<sup>H</sup>□<sub>S</sub>□ - □□


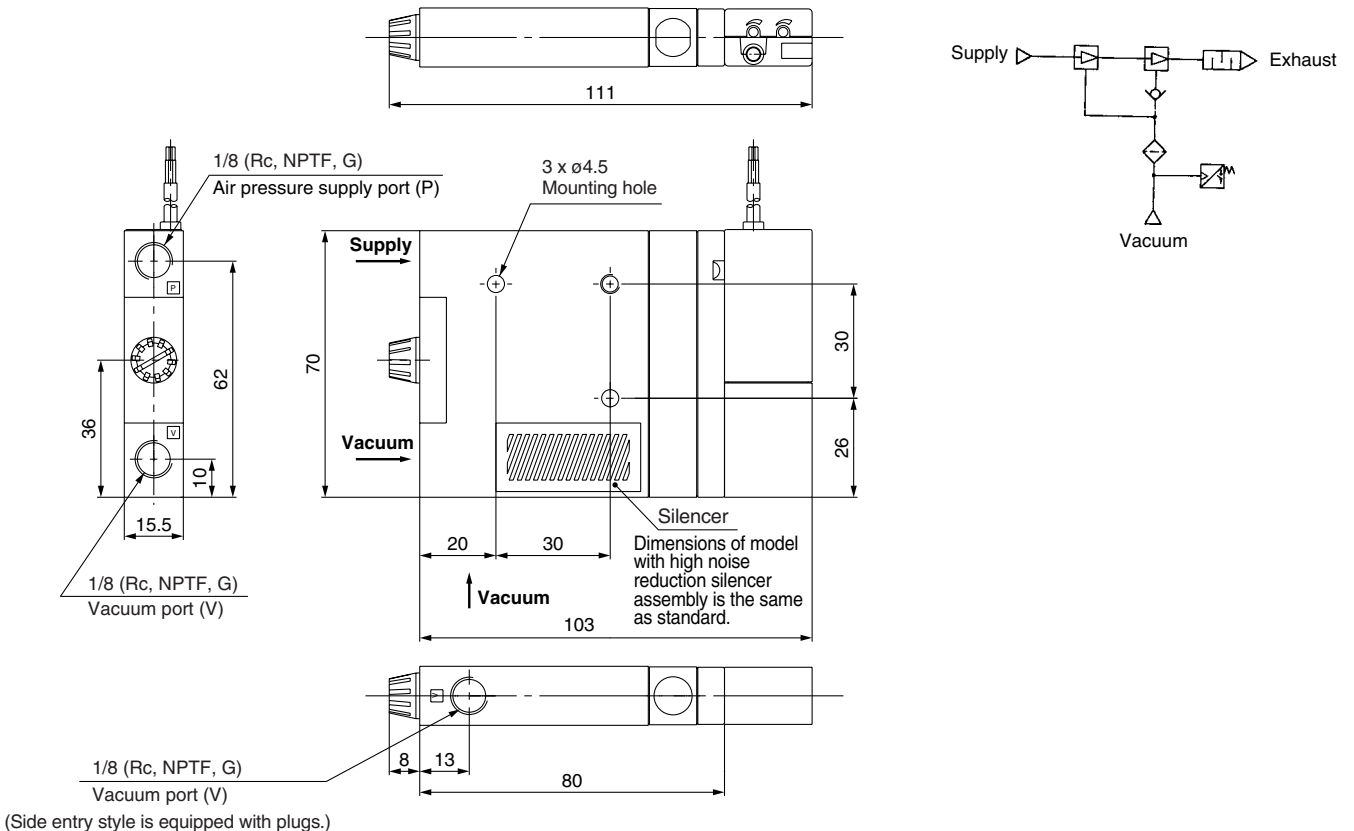


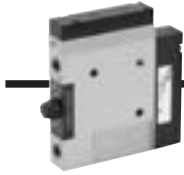

## Air Operated Type

ZM□1□□<sup>H</sup><sub>S</sub>□-Q□<sub>P</sub>□

### A: Release flow rate adjusting needle with lock nut

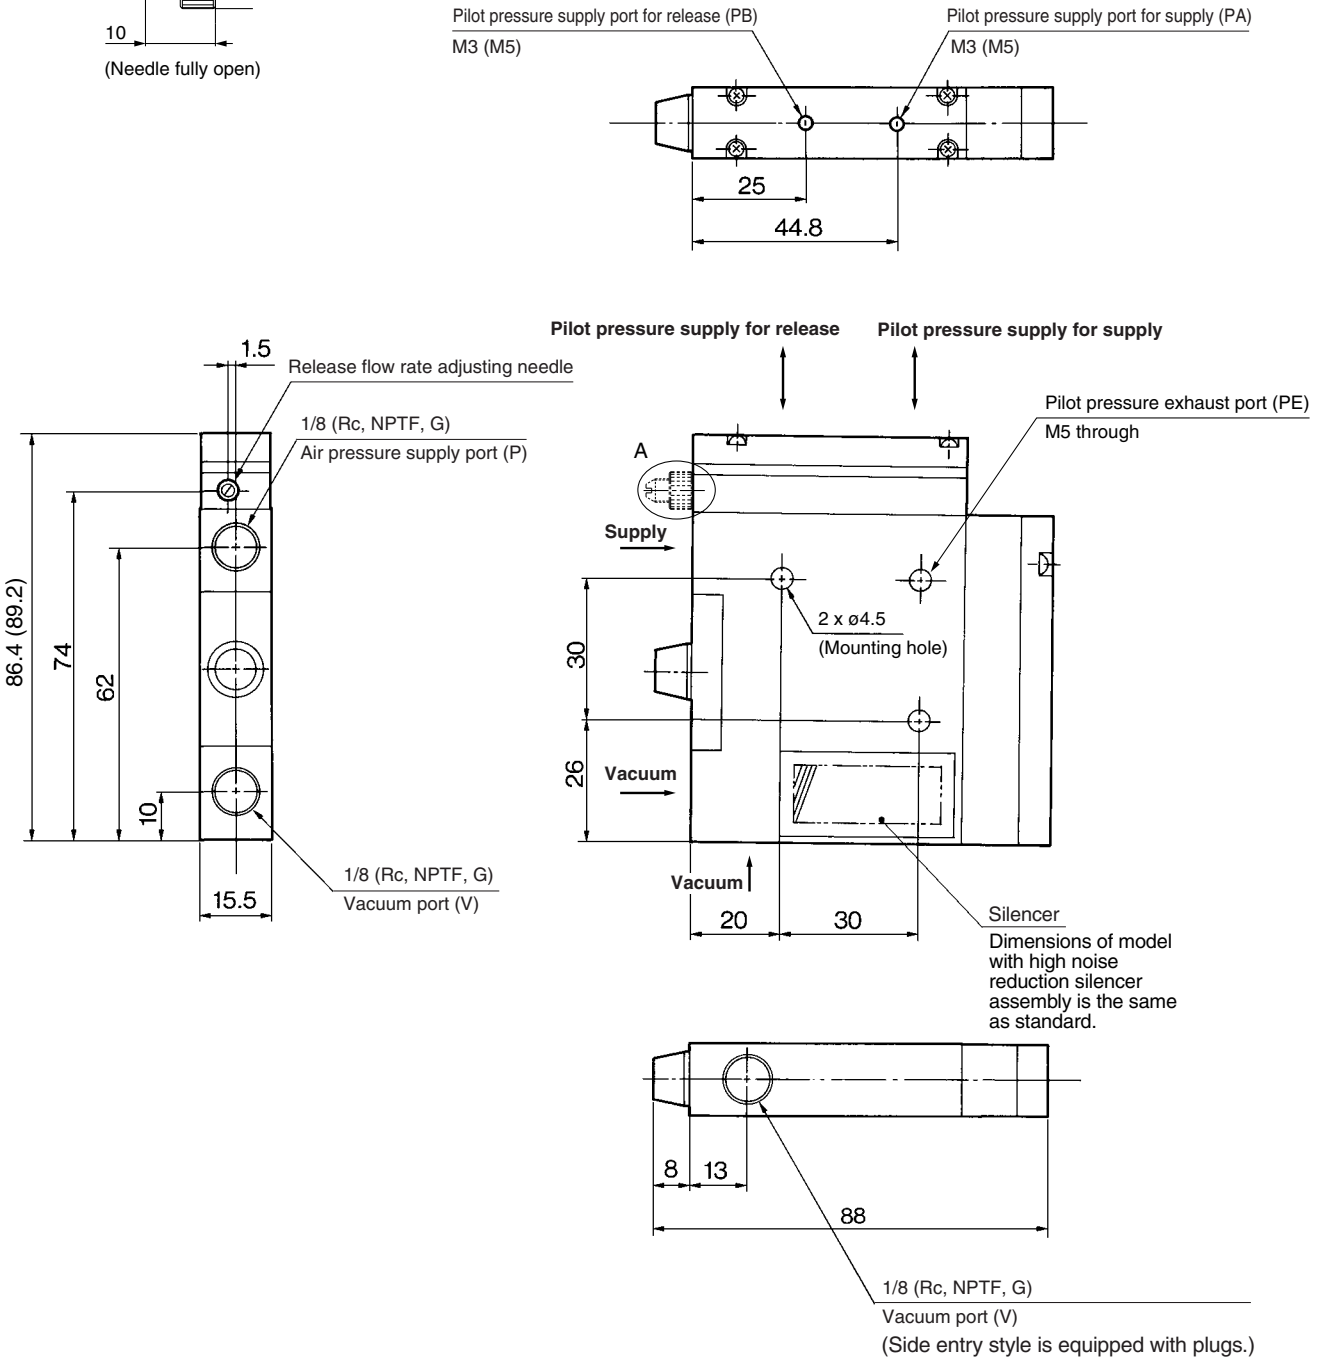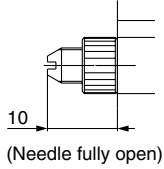

- ZA
- ZX
- ZR
- ZM**
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment


# Series ZM







<Components>

## For Single Unit/With Valve Basic Type with Switch and Valve


ZM□1□□<sup>H</sup><sub>M</sub>□-K□□□□-E

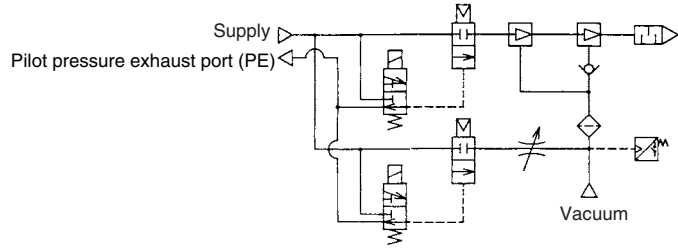

### A: Release flow rate adjusting needle with lock nut

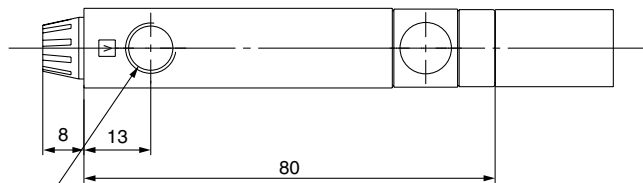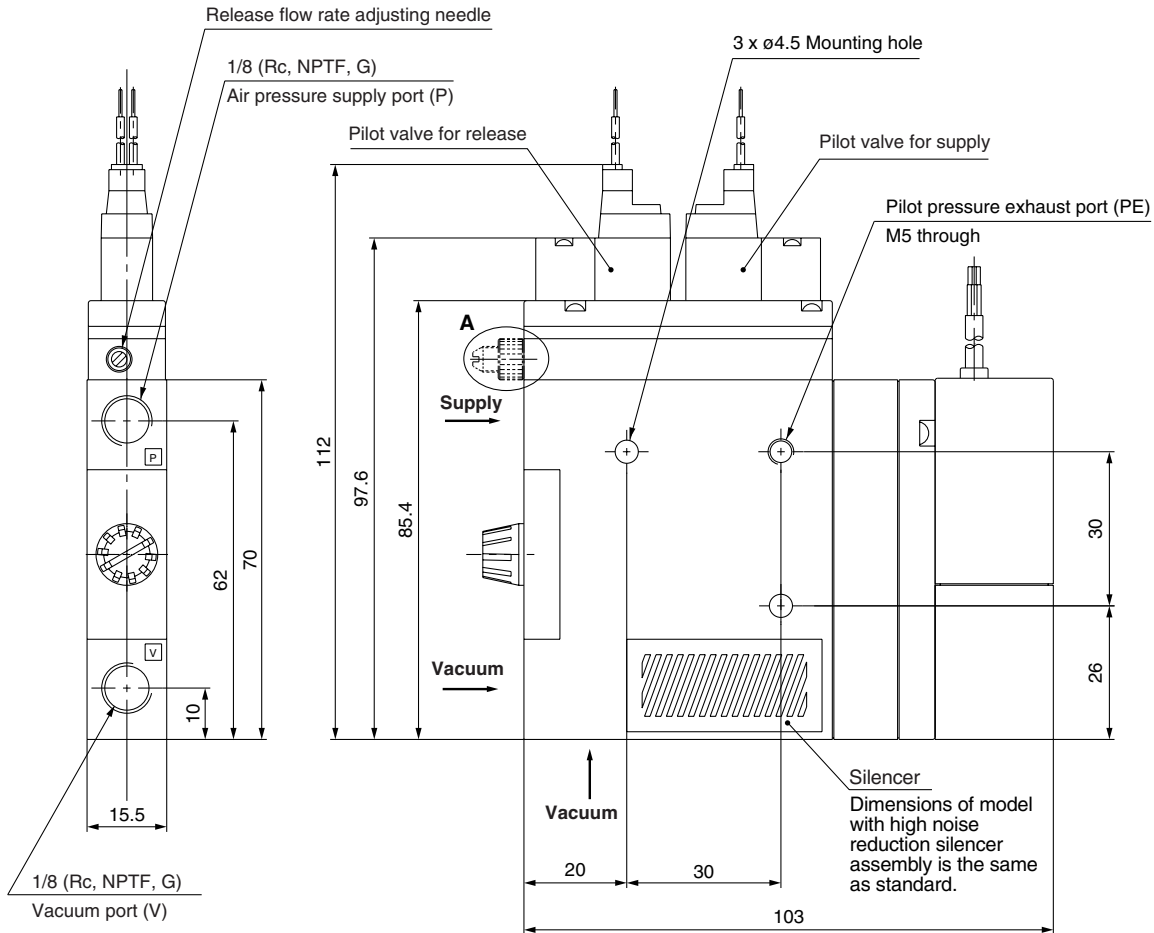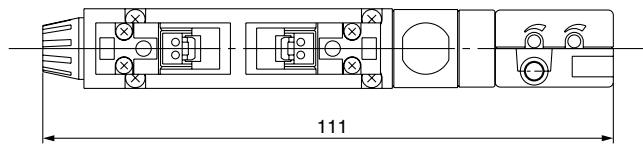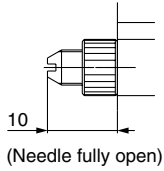


1/8 (Rc, NPTF, G)  
Vacuum port (V)  
(Side entry style is equipped with plugs.)

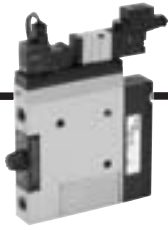






Single/With Air Supply Valve (N.O.) and Vacuum Release Valve **Basic Type with Valve**

<Components>

ZM□1□□<sup>H</sup><sub>M</sub>□-B□□□□<sub>S</sub>

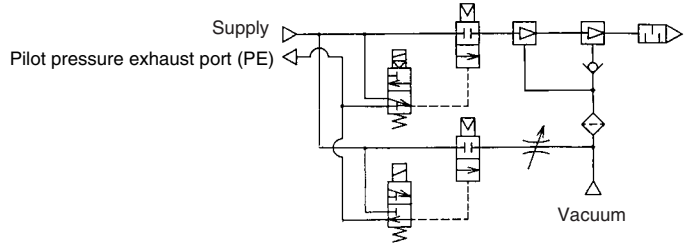




A: Release flow rate adjusting needle with lock nut

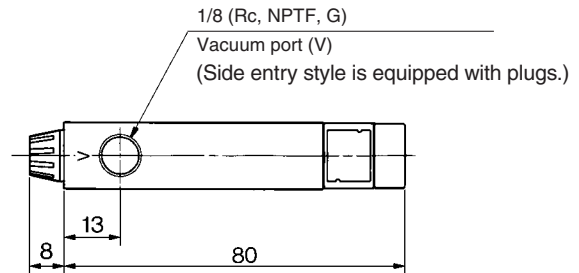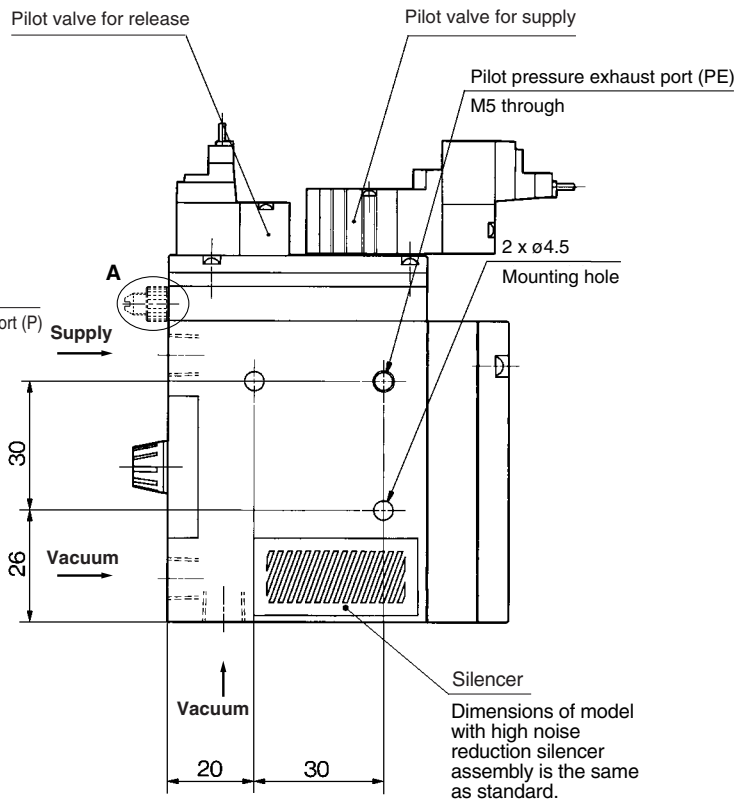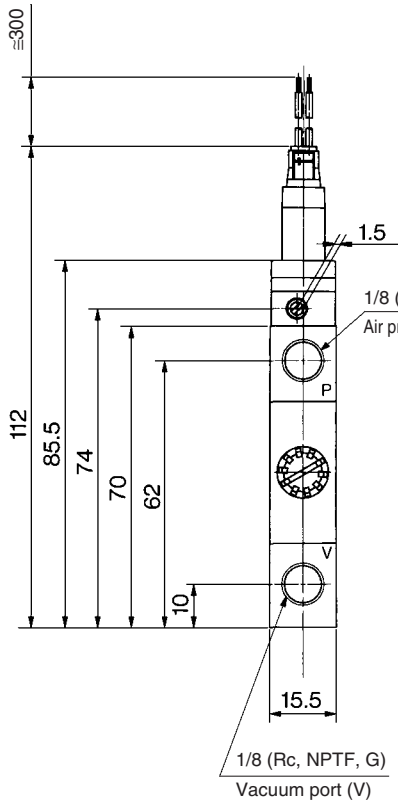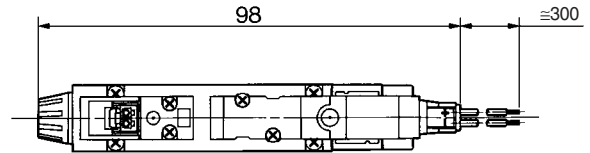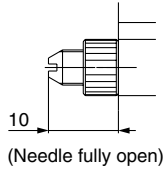

- ZA
- ZX
- ZR
- ZM**
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

# Series ZM

## Manifold Specifications: Series ZZM

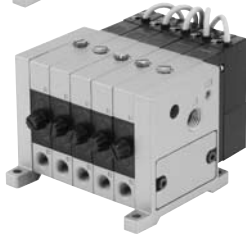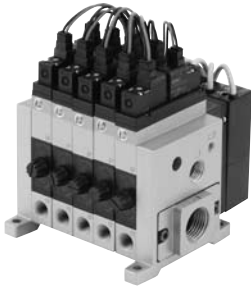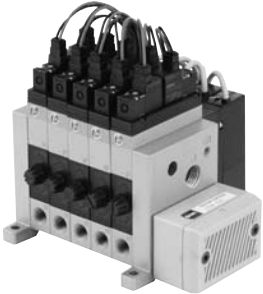

### Manifold Specifications

Manifold style	Stacking
Common air pressure supply port (P)*	1/4 (Rc, NPTF, G)
Individual air pressure supply port (P)*	1/8 (Rc, NPTF, G)
Common exhaust port (EXH)	1/2, 3/4 (Rc, NPTF, G)
Common exhaust port (EXH) location	Right side/Left side/Both sides**
Max. number of stations	Max. 10 stations
Silencer	ZZM-SA (With bolts)

\* The common air pressure supply port (P) and individual air pressure supply port (P) can be mounted together.

\*\* Right and left sides are viewed from the front side of vacuum port (V).

### Maximum Ejector Stations

Manifold model	Ejector model	ZM053	ZM073	ZM103	ZM133	ZM153
	ZM054	ZM074	ZM104	ZM134	ZM154	
ZZM [Stations] — □ R	□ L	10	8	5	4	3
ZZM [Stations] — □ B		10	10	8	6	5

\* Effective area of external silencer is 160 mm<sup>2</sup>.

### How to Order Ejector Manifold

**ZZM 06 - [ ] 06 R - R**

● Multi-ejector  
Series ZM  
Manifold

● Number of stations ●

01	1 station
⋮	⋮
05	5 stations
⋮	⋮
10	10 stations (Max.)

\* By viewing the front side of vacuum port (V), stations are counted starting from station 1 on the left side.

● Thread type ●

Nil	Rc
T	NPTF
F	G (Note)

Note) G thread

The thread ridge shape is compatible with the G thread standard (JIS B0202), but other shapes are not conforming to ISO16030 and ISO 1179.

● Common air pressure supply port (P) location\*\*

Nil	Both sides
R	Right side
L	Left side

\*\* Right and left sides are viewed from the front side of vacuum port (V).

● Common exhaust port (EXH) and silencer location\*\*

R	Right side
L	Left side
B	Both sides

\*\* Right and left sides are viewed from the front side of vacuum port (V).

● Common exhaust port (EXH) size

04	1/2
06	3/4
S	Silencer for ZZM (ZZM-SA)
00	Without exhaust port (Compatible with -X111)


The asterisk (\*) indicates the ejector model no. below the manifold base no. Prefix it to the vacuum ejector part numbers to be mounted. When it is not added, products are shipped separately.

Example)

ZZM06-06R ..... 1 pc.


\* ZM103H-J5LZ (-Q) ..... 3 pcs.

\* ZM133H-J5LZ (-Q) ..... 3 pcs


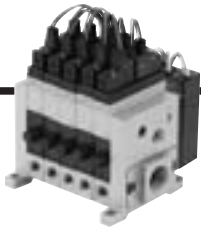


## Manifold

ZM Number of ejectors Common EXH port Port location

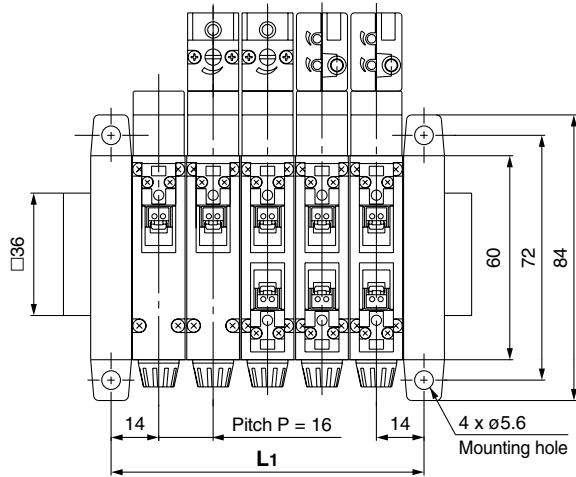

A: Release flow rate adjusting needle with lock nut

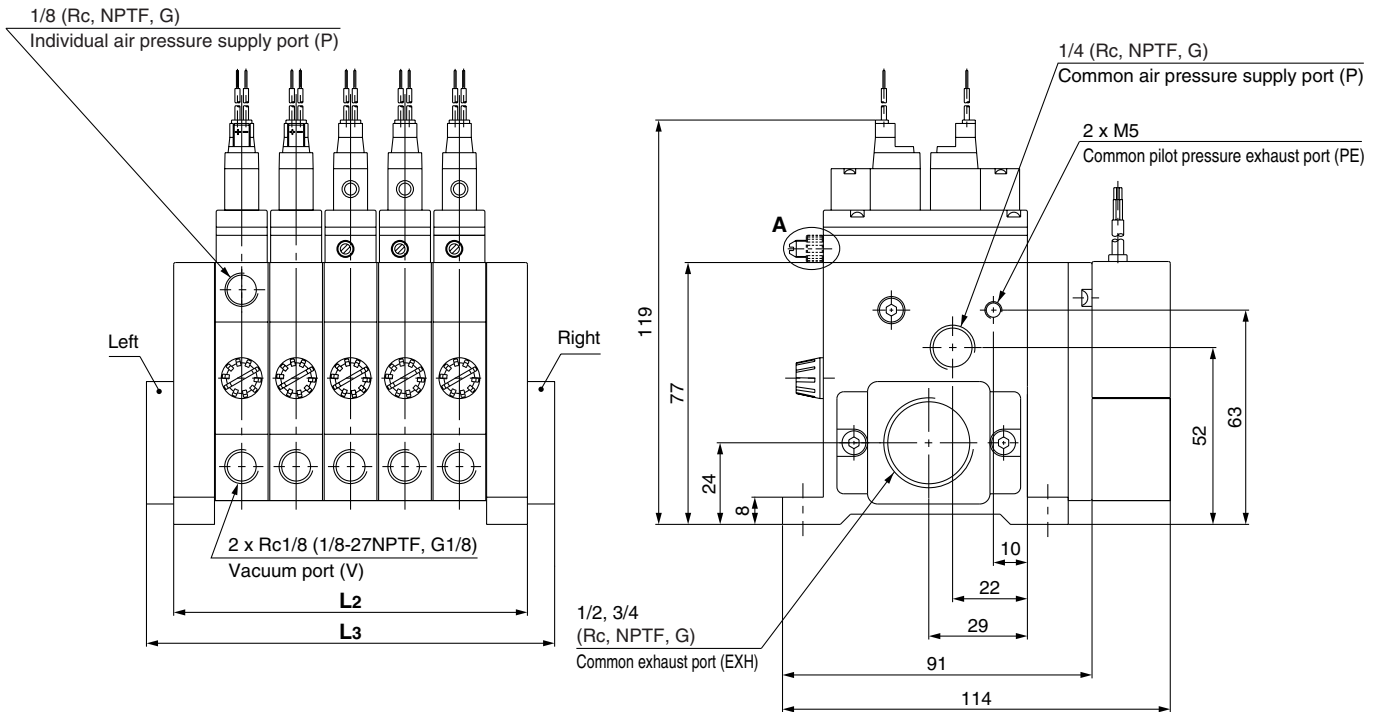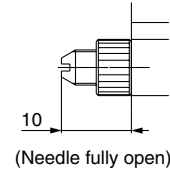


- ZA
- ZX
- ZR
- ZM**
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

		(mm)									
L	Stations	1	2	3	4	5	6	7	8	9	10
	L1	28 ±1.5	44 ±1.5	60 ±1.5	76 ±1.5	92 ±1.5	108 ±2.0	124 ±2.0	140 ±2.0	156 ±2.0	172 ±2.0
	L2	40 ±1.5	56 ±1.5	72 ±1.5	88 ±1.5	104 ±1.5	120 ±2.0	136 ±2.0	152 ±2.0	168 ±2.0	184 ±2.0
	L3	56 ±1.5	72 ±1.5	88 ±1.5	104 ±1.5	120 ±1.5	136 ±2.0	152 ±2.0	168 ±2.0	184 ±2.0	200 ±2.0




# Series ZM

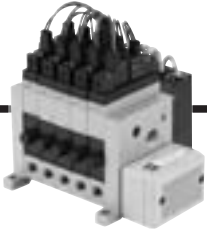




<Components>

## Manifold/With Silencer **Manifold with Silencer Dedicated for Manifold**

ZZM Number of ejectors — S Silencer location

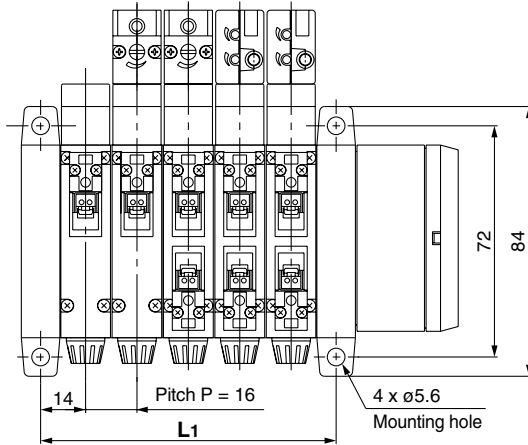


**A: Release flow rate adjusting needle with lock nut**

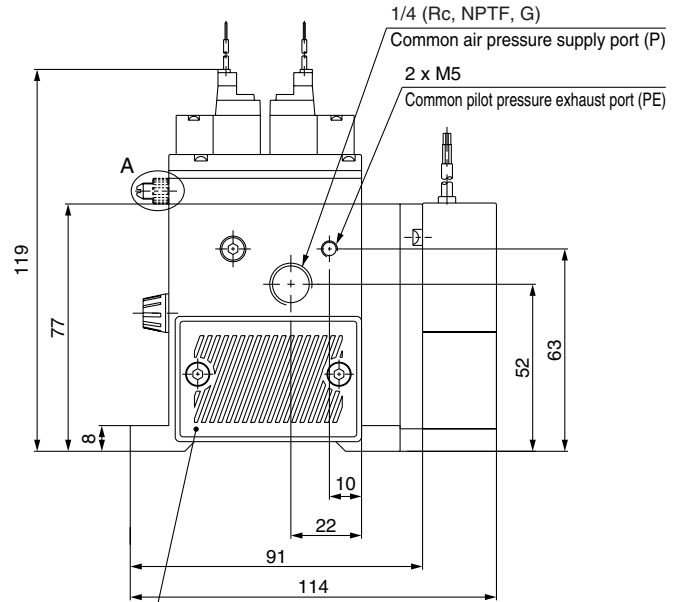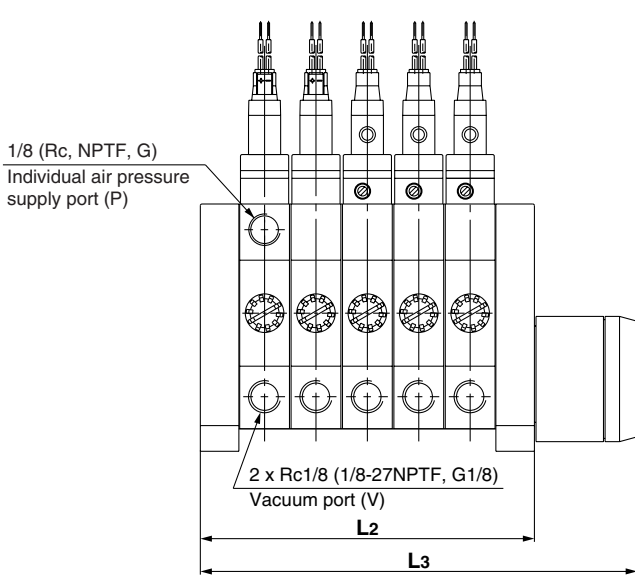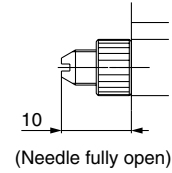

Silencer dedicated for manifold (ZZM-SA)


Vacuum port electrical entry (In the case of side entry/With plug at the bottom)

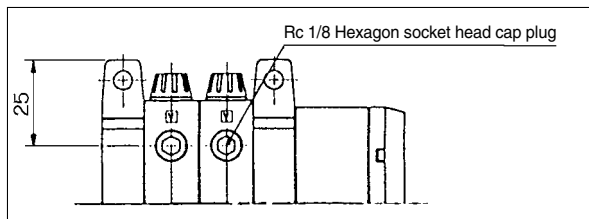

L	Stations	1	2	3	4	5	6	7	8	9	10
L1		28 ±1.5	44 ±1.5	60 ±1.5	76 ±1.5	92 ±1.5	108 ±2.0	124 ±2.0	140 ±2.0	156 ±2.0	172 ±2.0
L2		40 ±1.5	56 ±1.5	72 ±1.5	88 ±1.5	104 ±1.5	120 ±2.0	136 ±2.0	152 ±2.0	168 ±2.0	184 ±2.0
L3		72 ±1.5	88 ±1.5	104 ±1.5	120 ±1.5	136 ±1.5	152 ±2.0	168 ±2.0	184 ±2.0	200 ±2.0	216 ±2.0

(mm)

## Component Parts for Manifold

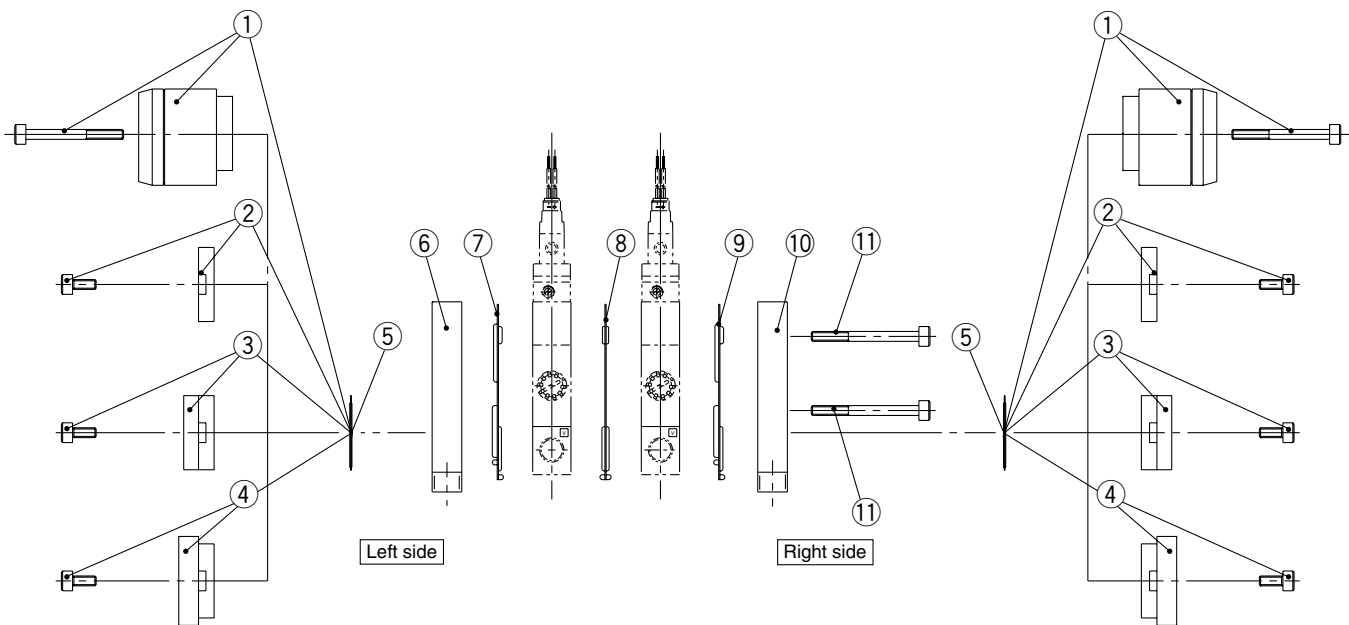

### (1)

Stations	Manifold part no.	Clamp rod part no.
1	ZZM01-□□□□-□	ZZM-CR-01
2	ZZM02-□□□□-□	ZZM-CR-02
3	ZZM03-□□□□-□	ZZM-CR-03
4	ZZM04-□□□□-□	ZZM-CR-04
5	ZZM05-□□□□-□	ZZM-CR-05
6	ZZM06-□□□□-□	ZZM-CR-06
7	ZZM07-□□□□-□	ZZM-CR-07
8	ZZM08-□□□□-□	ZZM-CR-08
9	ZZM09-□□□□-□	ZZM-CR-09
10	ZZM10-□□□□-□	ZZM-CR-10

### (2)

Manifold part no.	Adapter A		Adapter B		Silencer		Blanking plate	
	Left	Right	Left	Right	Left	Right	Left	Right
ZZM□□-□04R-□		○					○	
ZZM□□-□04L-□	○							○
ZZM□□-□04B-□	○	○						
ZZM□□-□06R-□				○			○	
ZZM□□-□06L-□			○					○
ZZM□□-□06B-□			○	○				
ZZM□□-□SR-□						○	○	
ZZM□□-□SL-□					○			○
ZZM□□-□SB-□					○	○		
ZZM□□-□00							○	○

### (3)

No.	Model	Description	Quantity	Note
1	ZZM-SA	<b>Silencer assembly</b>	*	
2	ZZM-BP	<b>Blanking plate assembly</b>	*	
3	ZZM-ADA-□	<b>Adapter A assembly</b>	*	Note 1)
4	ZZM-ADB-□	<b>Adapter B assembly</b>	*	Note 1)
5	ZZM-GE	<b>Gasket E</b>	2	
6	ZZM-EPL-□	<b>End plate L</b>	1	Note 1)
7	ZZM-GBL	<b>Gasket BL</b>	1	
8	ZZM-GBB	<b>Gasket BB</b>	Station: 1	
9	ZZM-GBR	<b>Gasket BR</b>	1	
10	ZZM-EPR-□	<b>End plate R</b>	1	
11	ZZM-CR-□□	<b>Clamp rod</b>	1	Refer to Table (1), Note 2)

\* The used quantity varies depending on the part number.  
Note 1) □: Symbol corresponding to the port thread type.  
Note 2) 2pcs. are included in one set.

ZA

ZX

ZR

**ZM**

ZMA

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP

Related  
Equipment

Series ZM

# Made to Order Specifications 1



Please contact SMC for detailed specifications, dimensions, and delivery.




[Option]

## 1 Double Check Valve/For Manifold

Single: ZM | Nozzle diameter | Body | Supply pressure | Valve | Voltage | Electrical entry | X107 | CE compliant  
↓ Double check valve


When a manifold is used, the exhaust that is discharged to the silencer could flow out to the vacuum port (V) side. To reduce this, a check valve is used.

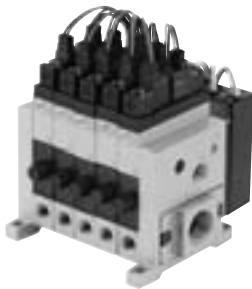

### Warning

1. It cannot be used for maintaining a vacuum.
2. Use a vacuum release valve. (Compatible with valve K and B types only.) (The workpiece cannot be released without a vacuum release valve.)
3. Compatible with the manifold specifications only.

## Construction

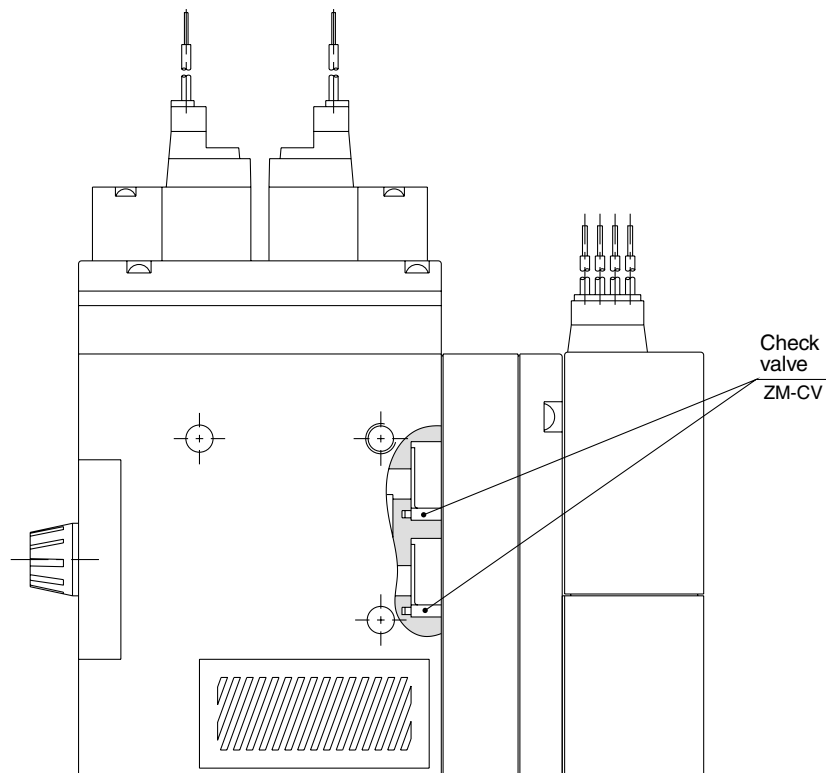



Please contact SMC for detailed specifications, dimensions, and delivery.



## 2 With Individual Exhaust Spacer

Single: ZM [Nozzle diameter] [Body] [Supply pressure] — X111 — CE compliant  
 ↓ Individual exhaust spacer

When using an individual ejector in a clean room, the exhaust can be discharged outside of the clean room by attaching an individual exhaust spacer. (The spacer can also be installed when using a manifold. Please contact SMC for mounting dimensions.)  
 \* It is possible to manufacture it with a valve and a switch.



### ⚠ Caution

To connect a pipe to the exhaust port, do not use an elbow joint because it creates resistance and prevents the system from attaining a sufficient vacuum.

When the product is used to prevent the manifold exhaust intrusion, exhaust intrusion may occur if exhaust pipes are put together.

When this special product is used for all manifold stations, the following part number can be used.


ZZM [ ] — 00  
 ↓ Stations                      ↓ Without exhaust ports on both sides

Exhaust spacer assembly: ZM — SP — [ ]

Nil	Rc
T	NPTF
F	G

- ZA
- ZX
- ZR
- ZM**
- ZMA
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

## Construction

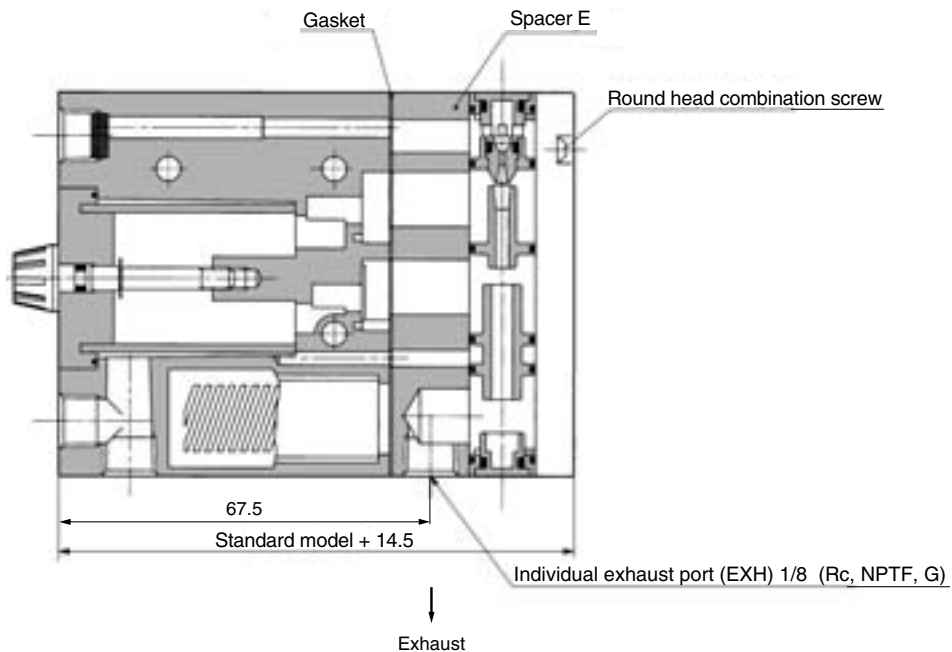

Series ZM

# Made to Order Specifications 3



Please contact SMC for detailed specifications, dimensions, and delivery.



[Option]

## 3 Double Solenoid Supply Valve

Single: ZM Nozzle diameter Body Supply pressure Valve Voltage Electrical entry X126 CE compliant

### • Double solenoid supply valve


-X126	With release valve (Valve K type only)
-X135	Without release valve (Valve J type only)

This is an air supply pilot valve that is made with double solenoids.

\* It is possible to manufacture it with a switch.



## Construction

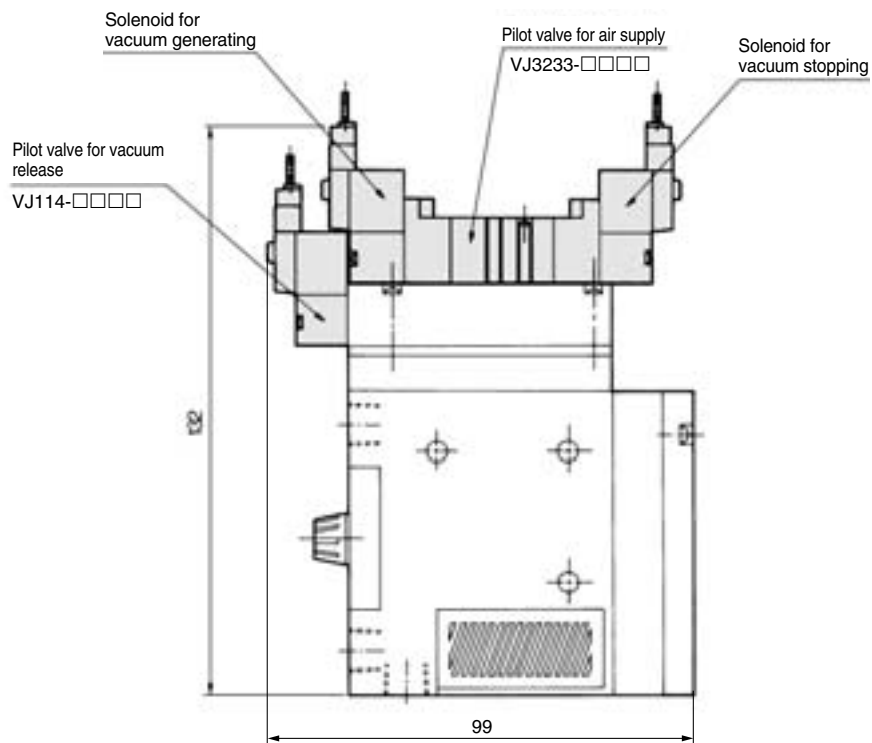

# Vacuum Ejector with Solid State Timer


## Series ZMA



**Incorporates solid state timer function for release valve control (Timer setting with PLC is unnecessary)**

**Allows sharing of switch/valve power supply, and single line for suction signal (Valve wiring is unnecessary)**

### Timing Chart

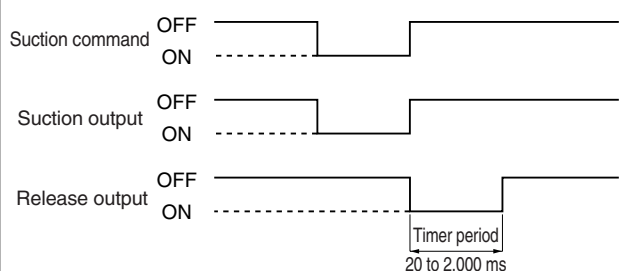

Note) When power is supplied, release output is performed once for the time period only.

**Timer can be easily adjusted without programming (Reduction of the load of PLC)**

ZA

ZX

ZR

ZM

**ZMA**

ZQ

ZH

ZU

ZL

ZY□

ZF□

ZP□

SP

ZCUK

AMJ

AMV

AEP

HEP

Related Equipment

# Vacuum Ejector With Solid State Timer Series ZMA

## How to Order

ZMA **07** **1** **H** **□** - **K** **5** - **T14** **C** - **L**

### Nozzle diameter

05	0.5 mm
07	0.7 mm
10	1.0 mm
13	1.3 mm
15	1.5 mm

### Body type

1	For single unit
3 <sup>Note)</sup>	Common SUP for manifold
5 <sup>Note)</sup>	Individual SUP for manifold

Note) When the product is used for the manifold, the exhaust air of the operating ejector may enter the vacuum port (V) of the non-operating ejector and be released if there are an operating and non-operating ejector. In order to reduce the exhaust intrusion, consider using a special double check valve (-X107).

### Standard supply pressure

M	0.35 MPa
S	0.45 MPa
H	0.5 MPa

\* Refer to "Table (1)" for selection of standard supply pressure and nozzle diameter.

### Thread type

Nil	Rc
T	NPTF
F	G*

\* G thread

The thread ridge shape is compatible with the G thread standard (JIS B0202), but other shapes are not conforming to ISO16030 and ISO1179.

### Release flow rate adjusting needle

Nil	Without lock nut
L	With lock nut

### Electrical entry of vacuum switch (Connector type)

C	Lead wire length 0.6 m
CL	Lead wire length 3 m
CN	Without lead wire

\* Refer to "Table (2)" for lead wire with 4-wire connector.

### Switch model

T14	1 point setting, No analog output available 3 turns, NPN output
T54	1 point setting, No analog output available 3 turns, PNP output

### Solenoid valve rated voltage

5	24 VDC
---	--------

### Valve

K	With air supply valve, Vacuum release valve
---	---

**Table (1)**  
**Combination of Nozzle Diameter and Standard Supply Pressure**


Nozzle diameter	Standard supply pressure (MPa)		
	M (0.35)	S (0.45)	H (0.5)
0.5 mm	—	—	●
0.7 mm	●	—	●
1.0 mm	●	—	●
1.3 mm	●	●	●
1.5 mm	—	●	—

**Table (2)**

Lead wire with 4-wire connector	P5022-6-1 (0.6 m)
	P5022-6-2 (3 m)

# Vacuum Ejector *Series ZMA*

With Solid State Timer

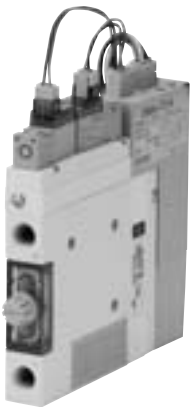

## Model

Nozzle diameter (mm)	Model	Standard supply pressure			Maximum suction flow rate $\ell/\text{min}$ (ANR)	Air consumption $\ell/\text{min}$ (ANR)	Diffuser construction
		H	M	S			
0.5	ZMA05 □ H	0.5 MPa	—	—	15	17	Double diffuser
0.7	ZMA07 □ H				30	30	
1.0	ZMA10 □ H				50	60	
1.3	ZMA13 □ H				66	90	
0.7	ZMA07 □ M	—	0.35 MPa	—	23	33	
1.0	ZMA10 □ M				38	60	
1.3	ZMA13 □ M				44	85	
1.3	ZMA13 □ S	—	—	0.45 MPa	37	88	Single diffuser
1.5	ZMA15 □ S				45	110	

## Vacuum Ejector Specifications

Fluid	Air
Max. operating pressure	0.7 MPa
Max. vacuum pressure	-84 kPa
Supply pressure range	0.25 to 0.55 MPa
Operating temperature range	5 to 50°C
Suction filter	Polyethylene sintered metal (30 $\mu\text{m}$ )


## Valve Specifications

How to operate	Pilot type
Main valve	Poppet
Effective area (Cv factor)	3 mm <sup>2</sup> (0.17)
Operating pressure range	0.25 to 0.6 MPa
Electrical entry	Plug connector
Max. operating frequency	5 Hz
Voltage	24 VDC

## Vacuum Switch with Timer Specifications (for controlling solenoid valve)


Power source	Operating voltage	24 VDC $\pm 10\%$
	Consumption current per one unit	1.1 W (at switch output OFF)
Sensor switch output	Number of output	1
	Output	NPN/PNP open collector
	Setting trimmer	3 turns
	Operation indicator light	Red LED lighting
	Temperature characteristics	$\pm 3\%$ FS or less
	Hysteresis	3% FS or less (fixed)
Part of timer	Timer period	20 to 2,000 ms
	Setting trimmer	3 turns
	Temperature characteristics	$\pm 3\%$ FS or less

## Connection Example

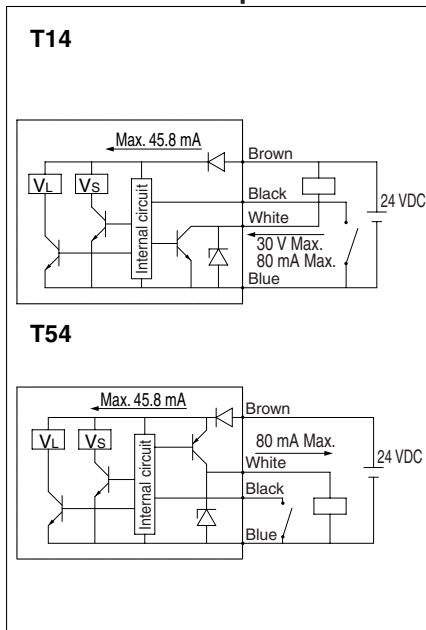

Vl: Pilot valve for release  
Vs: Pilot valve for supply

## Timing Chart

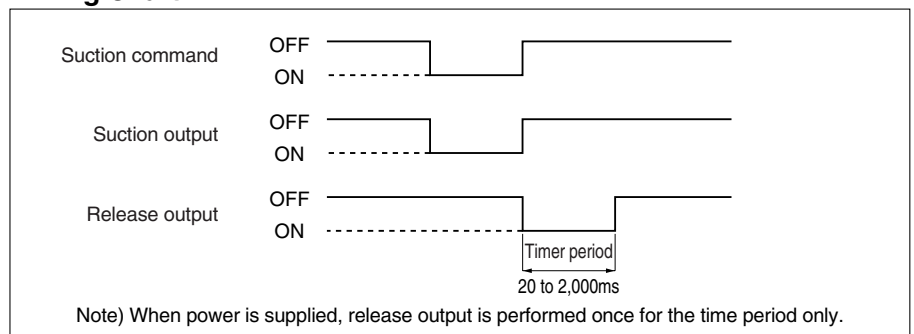

## Wiring

Brown	DC (+)
Black	Suction command
White	Switch output
Blue	DC (-)

ZA

ZX

ZR

ZM

ZMA

ZQ

ZH

ZU

ZL

ZY □

ZF □

ZP □

SP

ZCUK

AMJ

AMV

AEP


HEP

Related Equipment



# Series ZMA

Construction: ZMA□1□-K□L-E□

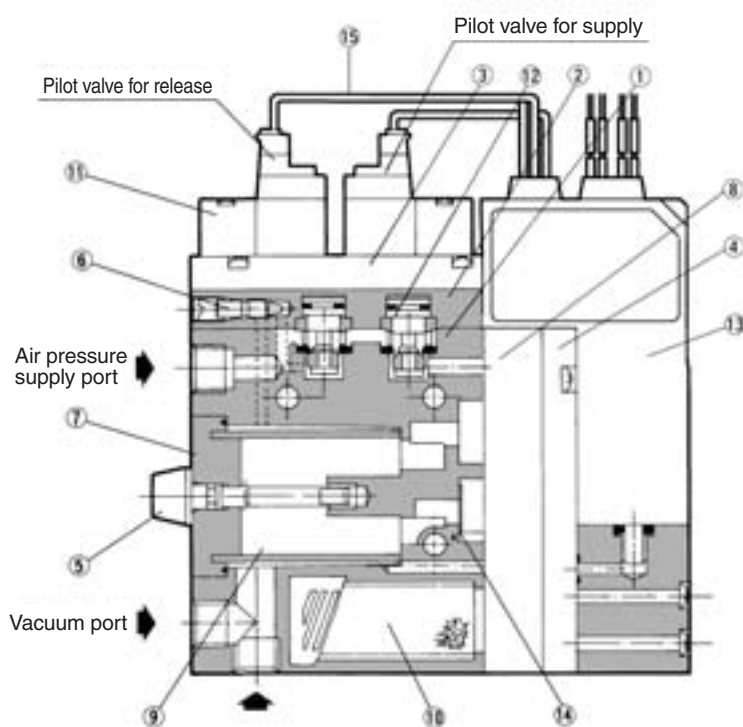

## Component Parts

No.	Description	Material	Note
1	<b>Body</b>	Aluminum die-casted	
2	<b>Valve cover</b>	Resin	
3	<b>Adapter plate</b>	Resin	
4	<b>Cover</b>	Zinc die-casted	ZMA-HCB
5	<b>Tension bolt</b>	Stainless steel/Polyacetal	
6	<b>Release flow rate adjusting needle</b>	Brass	Electroless nickel plated


## Replacement Parts

No.	Description	Material	Part no.
7	<b>Filter cover assembly</b>	—	ZMA-FCB-0
8	<b>Diffuser assembly</b>	—	ZMA□□0□-0
9	<b>Suction filter</b>	Polyethylene	ZM-SF
10	<b>Silencer assembly</b>	—	ZM-SA
11	<b>Pilot valve</b>	—	SY114-5LOZ
12	<b>Poppet valve assembly</b>	—	ZMA-PV
13	<b>Vacuum switch with timer</b>	—	ZMA-T14CN #1 (NPN) ZMA-T54CN #1 (PNP)
14	<b>Check valve</b>	NBR	ZM-CV
15	<b>Connector assembly</b>	—	ZMA-VC-1A #1


**Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: H ... 0.5 MPa**

**ZMA05□H**

**Exhaust Characteristics**

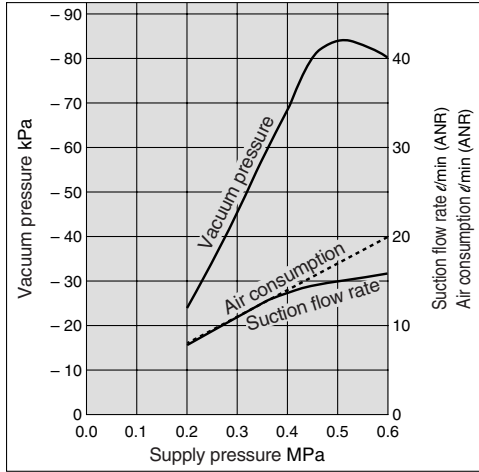


**Flow Characteristics**

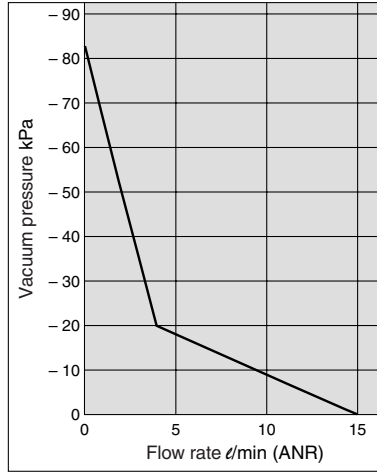


**ZMA07□H**

**Exhaust Characteristics**

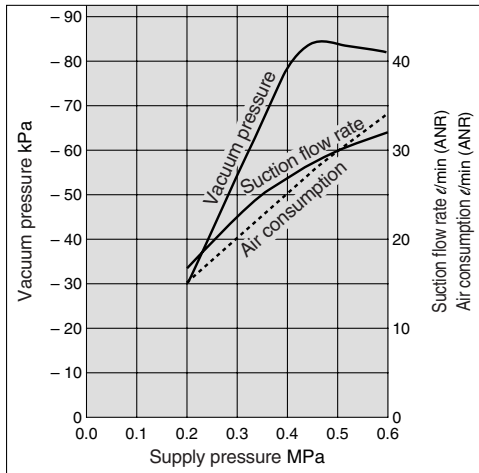


**Flow Characteristics**

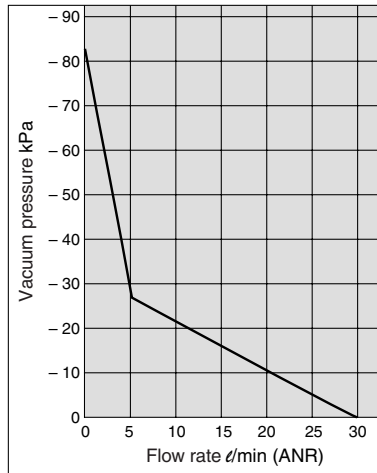


**ZMA10□H**

**Exhaust Characteristics**

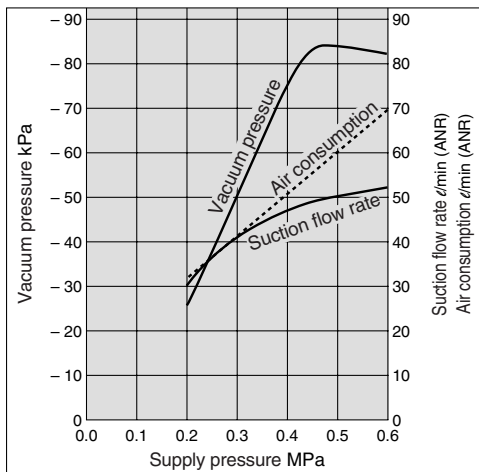

**Flow Characteristics**

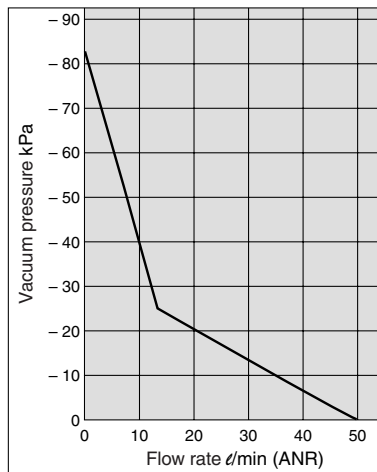


- ZA
- ZX
- ZR
- ZM
- ZMA**
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

# Series ZMA


## Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: H ... 0.5 MPa

### ZMA13□H

#### Exhaust Characteristics

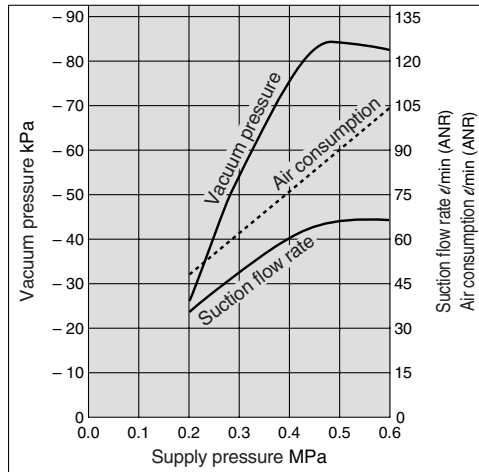


#### Flow Characteristics

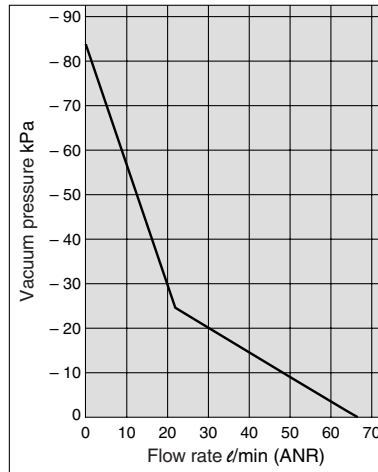


## Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: S ... 0.45 MPa

### ZMA13□S

#### Exhaust Characteristics

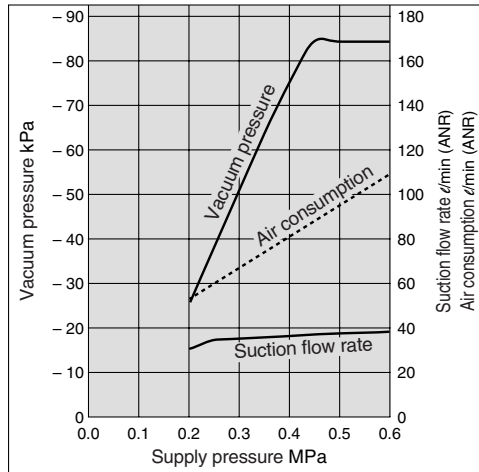


#### Flow Characteristics

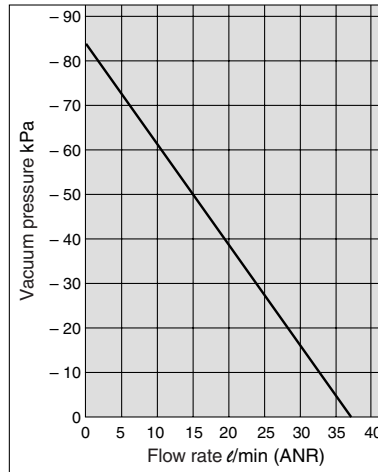


### ZMA15□S

#### Exhaust Characteristics

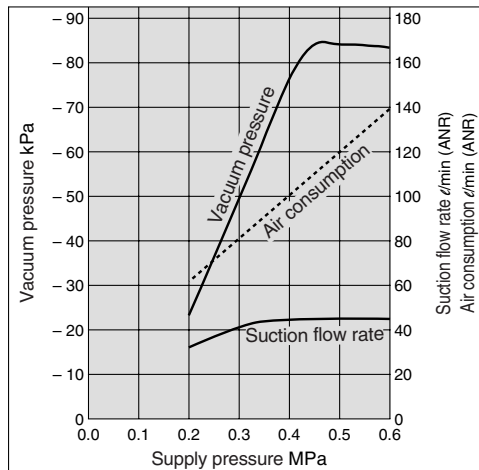


#### Flow Characteristics

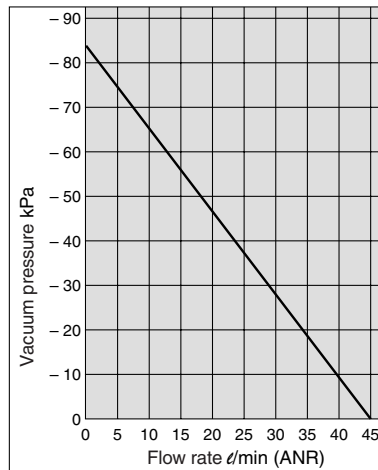


**Exhaust Characteristics/Flow Characteristics, Standard Supply Pressure: M ... 0.35 MPa**

**ZMA07 □ M**


**Exhaust Characteristics**

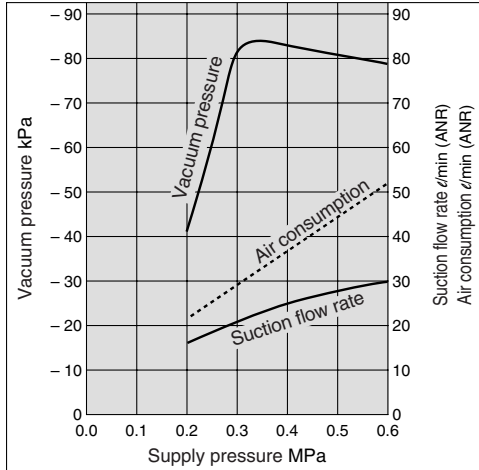

**Flow Characteristics**

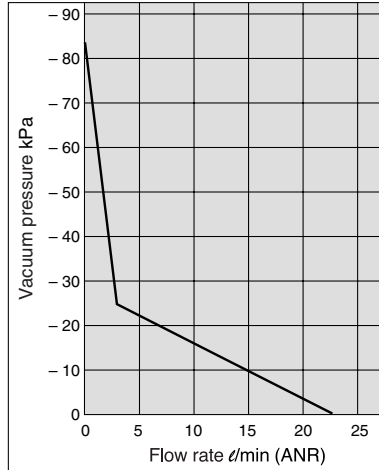

**How to Read Flow Characteristics Graph**

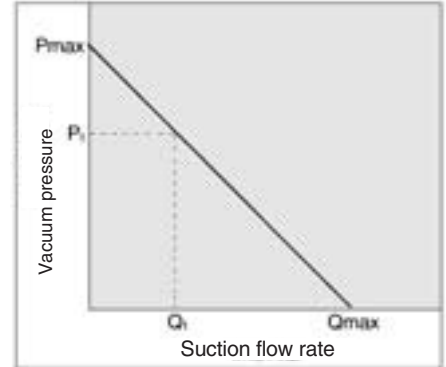


Flow characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, a change in vacuum pressure will also be expressed. Normally this relationship is expressed in ejector standard supply pressure. In graph, Pmax is max. vacuum pressure and Qmax is max. suction flow. The values are specified according to catalog use. Changes in vacuum pressure are expressed in the order below.


1. When ejector suction port is covered and made airtight, suction flow is 0 and vacuum pressure is at maximum value (Pmax).
  2. When suction port is opened gradually, air can flow through (air leakage), suction flow increases, but vacuum pressure decreases (condition P<sub>1</sub> and Q<sub>1</sub>).
  3. When suction port is opened further, suction flow moves to maximum value (Qmax), but vacuum pressure is near 0 (atmospheric pressure).
- When vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure decreases as leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0. When ventilative or leaky work must be adsorbed, please note that vacuum pressure will not be high.

**ZMA10 □ M**

**Exhaust Characteristics**

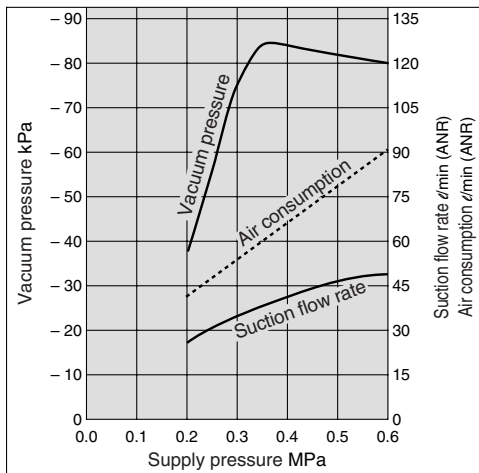


**Flow Characteristics**

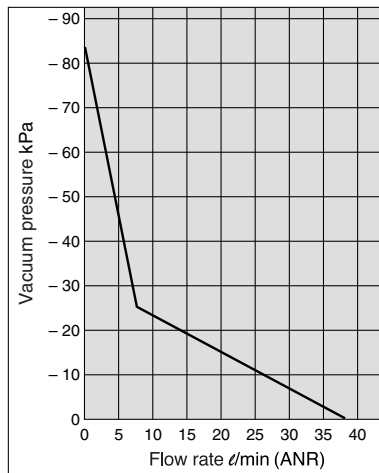


**ZMA13 □ M**

**Exhaust Characteristics**

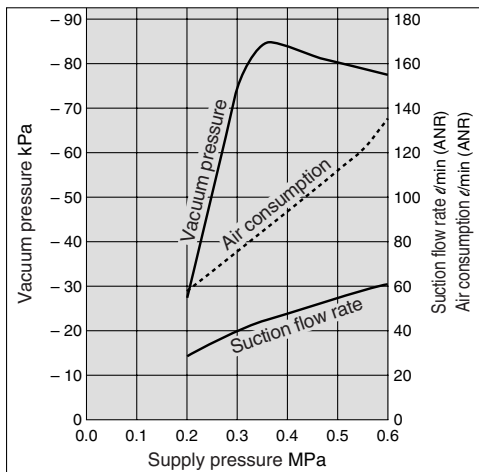


**Flow Characteristics**

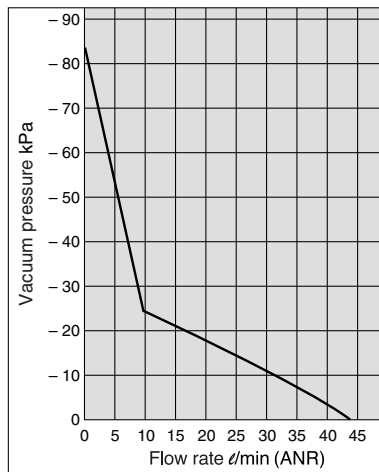


- ZA
- ZX
- ZR
- ZM
- ZMA**
- ZQ
- ZH
- ZU
- ZL
- ZY □
- ZF □
- ZP □
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP
- Related Equipment

# Series ZMA


## Dimensions

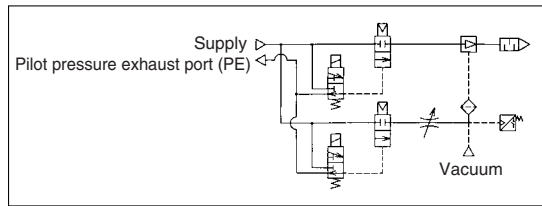


(ZMA<sup>13</sup><sub>15</sub>1S-K5-T14C)

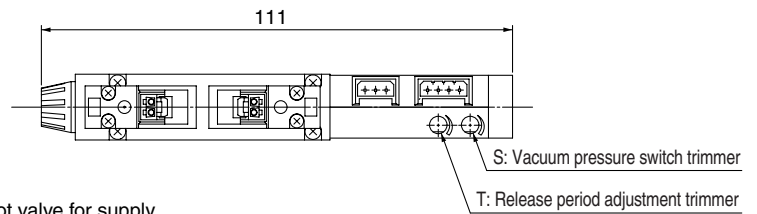

### A: Release flow rate adjusting needle with lock nut

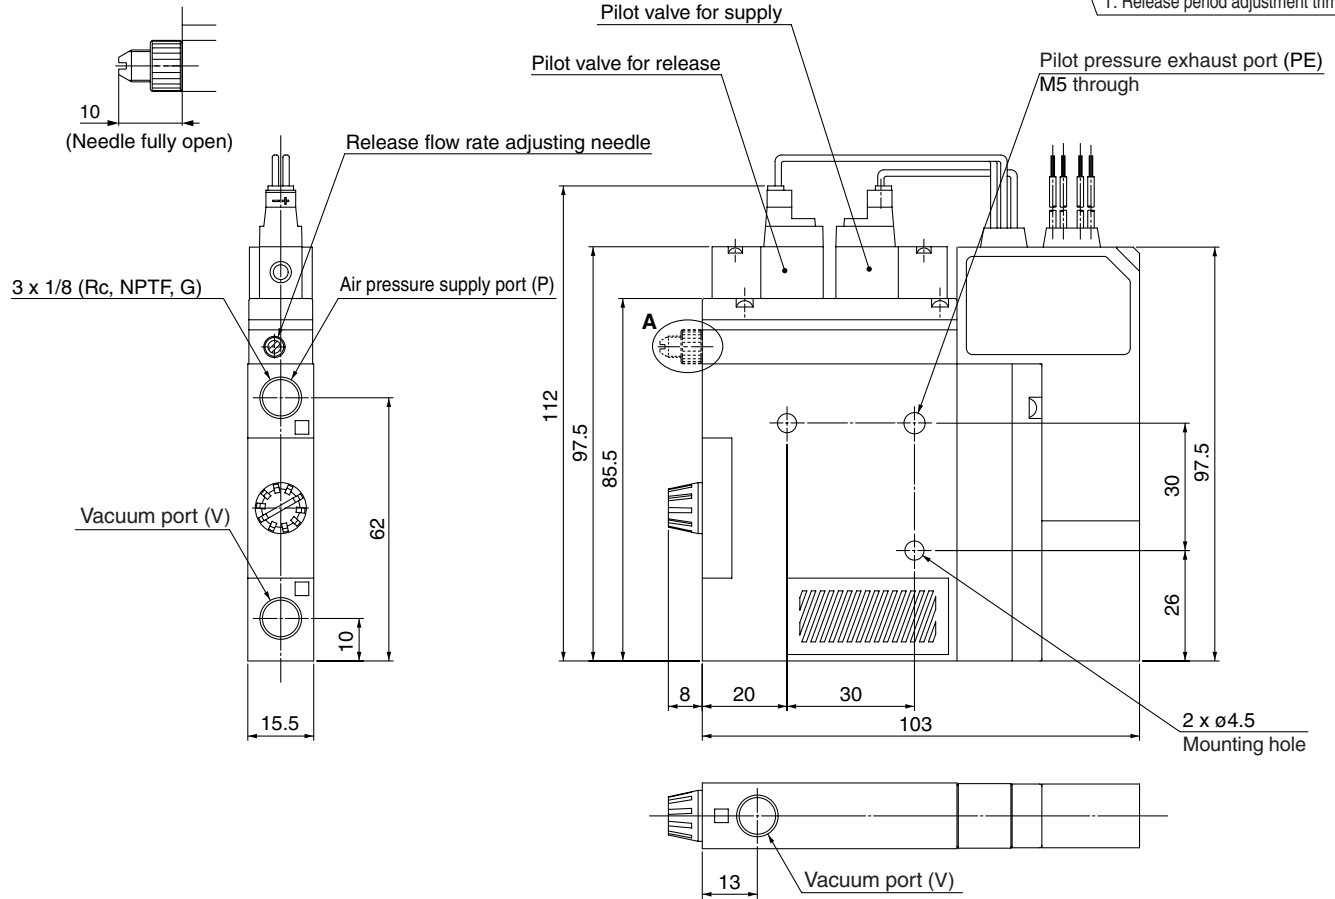

## Manifold Specifications: Series ZZMA

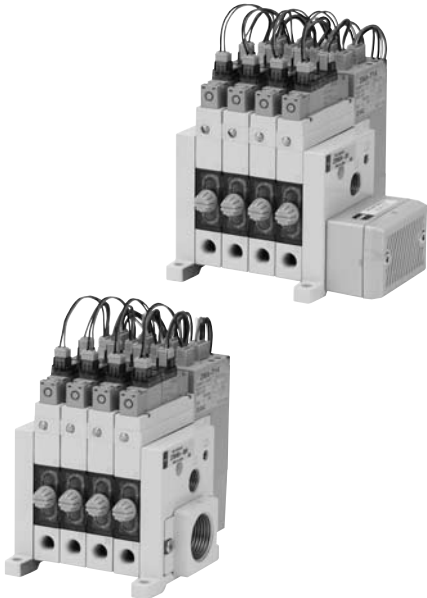

### Manifold Specifications

Manifold style	Stacking
Common air pressure supply port (P) *	1/4 (Rc, NPTF, G)
Individual air pressure supply port (P) *	1/8 (Rc, NPTF, G)
Common exhaust port	1/2, 3/4 (Rc, NPTF, G)
Position of common exhaust port (EXH)	Right side/Left side/Both sides**
Max. number of stations	Max.10 stations
Silencer	ZZM-SA (With bolts)

\* The common air pressure supply port (P) and individual air pressure supply port (P) can be mounted together.  
\*\* Right and left sides are viewed from the front side of vacuum port (V).

### Maximum Ejector Stations (Max. operable nos. simultaneously)

Manifold model	Ejector model					
	ZMA053 ZMA054	ZMA073 ZMA074	ZMA103 ZMA104	ZMA133 ZMA134	ZMA153 ZMA154	
ZZMA [Stations]—06 <sup>R</sup> <sub>L</sub>	10	8	5	4	3	
ZZMA [Stations]—06B	10	10	8	6	5	
ZZMA [Stations]—04 <sup>R</sup> <sub>L</sub>	10	8	5	4	3	
ZZMA [Stations]—04B	10	10	8	6	5	

\* Effective area of external silencer is 160 mm<sup>2</sup>.  
Cv value: 8.8

## How to Order Ejector Manifold

**ZZMA 06** - **06** **R** - **R**

#### Number of stations

(By viewing the front side of vacuum port (V), stations are counted starting from station 1 on the left side.)

01	1 station
:	:
10	10 stations (max.)

#### Thread type

Nil	Rc
T	NPTF
F	G *

\* G thread

The thread ridge shape is compatible with the G thread standard (JIS B 0202), but other shapes are not conforming to ISO16030 and ISO1179.

#### Common air pressure supply port (P) location \*\*

Nil	Both Sides
R	Right Side
L	Left Side

\*\* Right and left side are viewed from the front side of vacuum port (V).

#### Common exhaust port (EXH) and silencer location

R	Right Side
L	Left Side
B	Both Sides

Note) Right and left side are viewed from the front side of vacuum port (V).

#### Common exhaust port (EXH) Size


04	1/2
06	3/4
S	Silencer dedicated for ZZMA (ZZM-SA)
00	Without exhaust port (Compatible with -X111)

The asterisk (\*) indicates the ejector model no. below the manifold base no. Prefix it to the vacuum unit part numbers to be mounted. When it is not added, products are shipped separately.

Example) Manifold model no.: ZZMA04-SR (1 pc.)


Ejector model no. : \* ZMA073H-K5-T14C (4 pcs.)

# Series ZMA

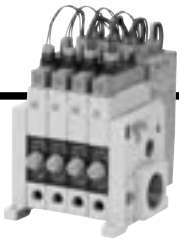


## Manifold


ZMA Number of ejectors — Common EXH port Port position

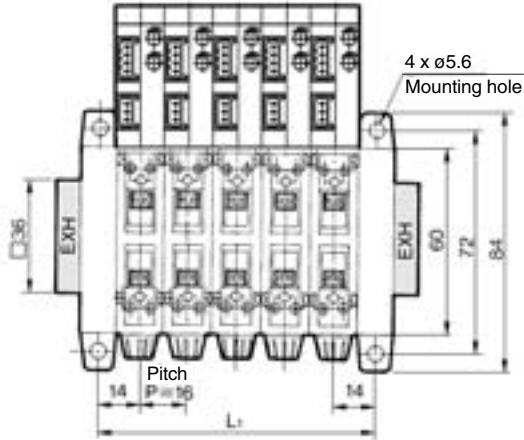


**A:** Release flow rate adjusting needle with lock nut

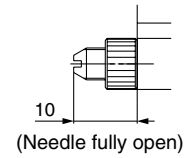

1/8 (Rc, NPTF, G)  
Individual air pressure supply port (P)

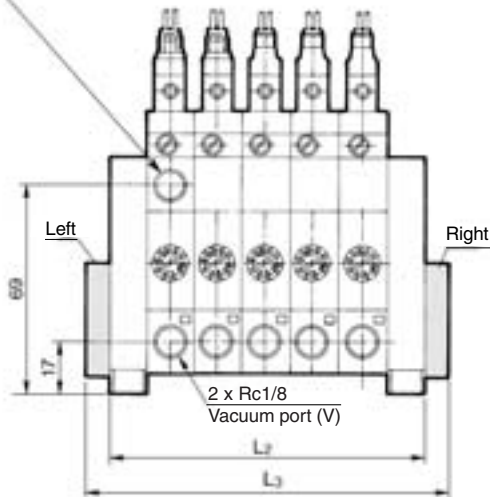

1/4 (Rc, NPTF, G)  
Common air pressure supply port (P)

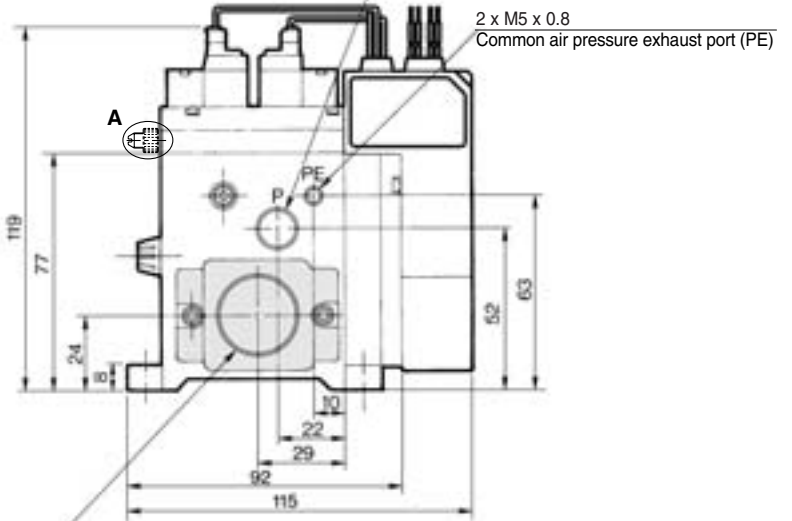


2 x M5 x 0.8  
Common air pressure exhaust port (PE)

1/2, 3/4 (Rc, NPTF, G)  
Common exhaust port (EXH)


		(mm)									
L	Stations	1	2	3	4	5	6	7	8	9	10
	L1	28 ±1.5	44 ±1.5	60 ±1.5	76 ±1.5	92 ±1.5	108 ±2.0	124 ±2.0	140 ±2.0	156 ±2.0	172 ±2.0
	L2	40 ±1.5	56 ±1.5	72 ±1.5	88 ±1.5	104 ±1.5	120 ±2.0	136 ±2.0	152 ±2.0	168 ±2.0	184 ±2.0
	L3	56 ±1.5	72 ±1.5	88 ±1.5	104 ±1.5	120 ±1.5	136 ±2.0	152 ±2.0	168 ±2.0	184 ±2.0	200 ±2.0

# Vacuum Ejector With Solid State Timer **Series ZMA**


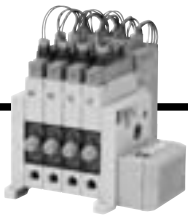


<Components>  
**Manifold/With Silencer**    **Manifold with Silencer Dedicated for Manifold**

**ZZMA**    **Number of ejectors** — **S**    **Position of silencer**

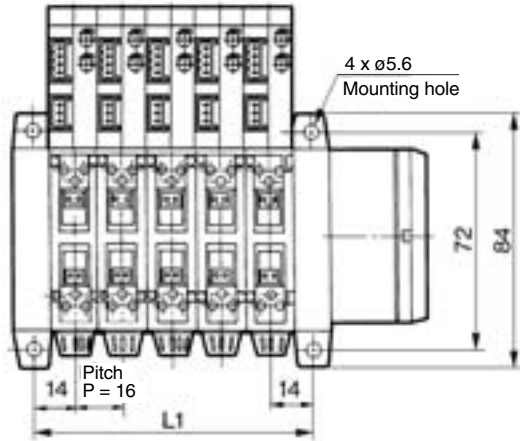

**A: Release flow rate adjusting needle with lock nut**

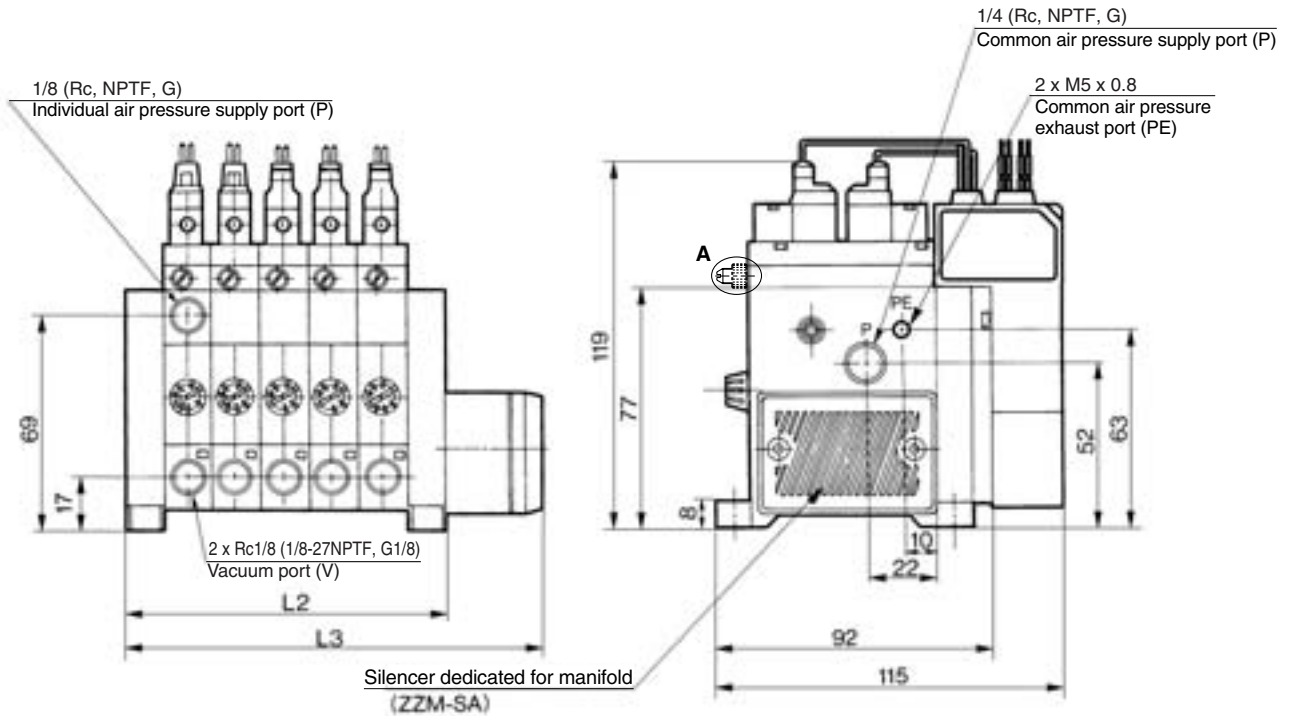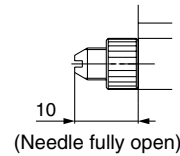

- ZA
- ZX
- ZR
- ZM
- ZMA**
- ZQ
- ZH
- ZU
- ZL
- ZY□
- ZF□
- ZP□
- SP
- ZCUK
- AMJ
- AMV
- AEP
- HEP

Related Equipment

L	Stations	(mm)									
		1	2	3	4	5	6	7	8	9	10
	<b>L1</b>	28 ±1.5	44 ±1.5	60 ±1.5	76 ±1.5	92 ±1.5	108 ±2.0	124 ±2.0	140 ±2.0	156 ±2.0	172 ±2.0
	<b>L2</b>	40 ±1.5	56 ±1.5	72 ±1.5	88 ±1.5	104 ±1.5	120 ±2.0	136 ±2.0	152 ±2.0	168 ±2.0	184 ±2.0
	<b>L3</b>	72 ±1.5	88 ±1.5	104 ±1.5	120 ±1.5	136 ±1.5	152 ±2.0	168 ±2.0	184 ±2.0	200 ±2.0	216 ±2.0





## Series ZMA

# Specific Product Precautions

Be sure to read before handling.

Refer to front matters 38 and 39 for Safety Instructions and pages 844 to 846 for Vacuum Equipment Precautions.

### Mounting

#### Warning

1. Do not drop or bump.  
Do not drop, bump or apply excessive impact (1,000 m/s<sup>2</sup>) when handling. Even if the switch body is not damaged, the switch may suffer internal damage that will lead to malfunction.
2. Hold the product from the body side when handling.  
The tensile strength of the power cord is 49 N, and pulling it with a greater force can cause failure.
3. When handling the product, never move or loosen the switch assembly or the switch assembly mounting screws.

### Wiring

#### Warning

1. Do not allow repeated bending or stretching forces to be applied to lead wires.  
Wiring arrangements in which repeated bending stress or stretching force is applied to the lead wires can cause broken wires.

### Pressure Source

#### Warning

1. Vacuum pressure switches  
There will be no change in performance if a pressure of approximately 0.5 MPa is applied momentarily (when releasing vacuum), but care should be taken that pressures of 0.2 MPa or more are not applied on a regular basis.

### Operating Environment

#### Warning

1. The product cannot be used in a strong magnetic field.